RF & BB (v06.01 ed.66 for layout version 06)

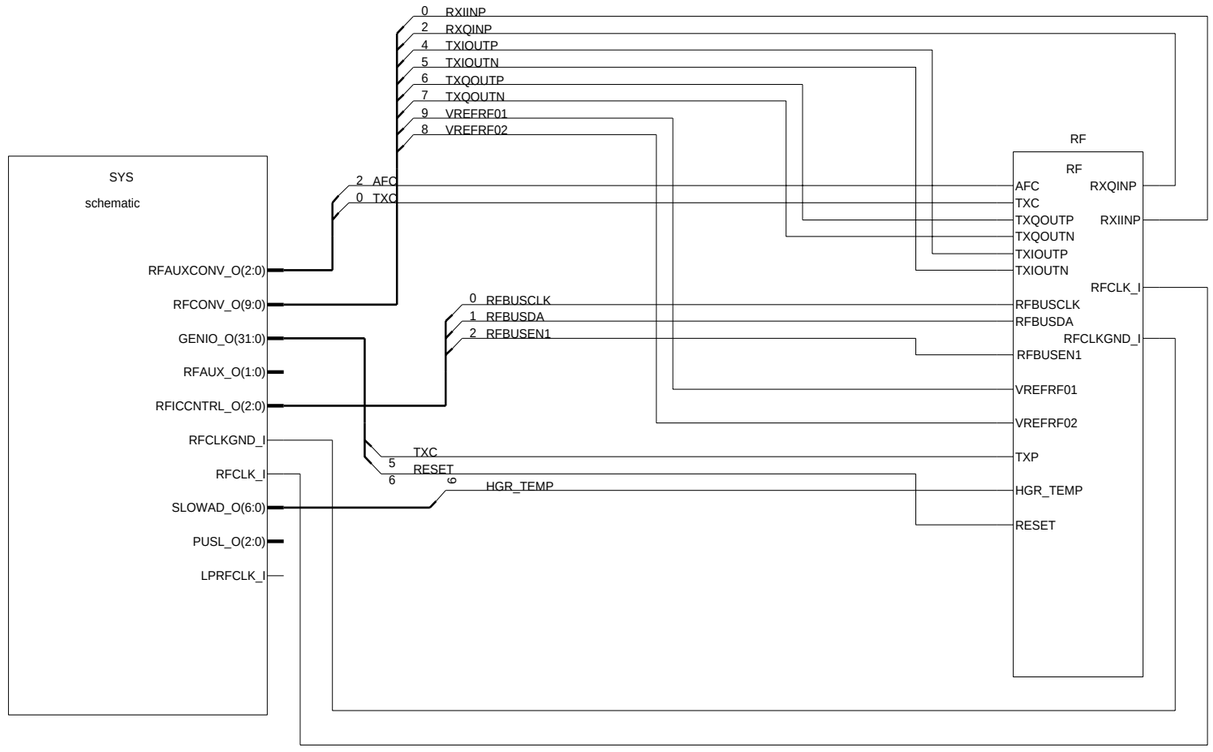

©Nokia Corporation

RF (v.06.01 ed.194 for version 06)

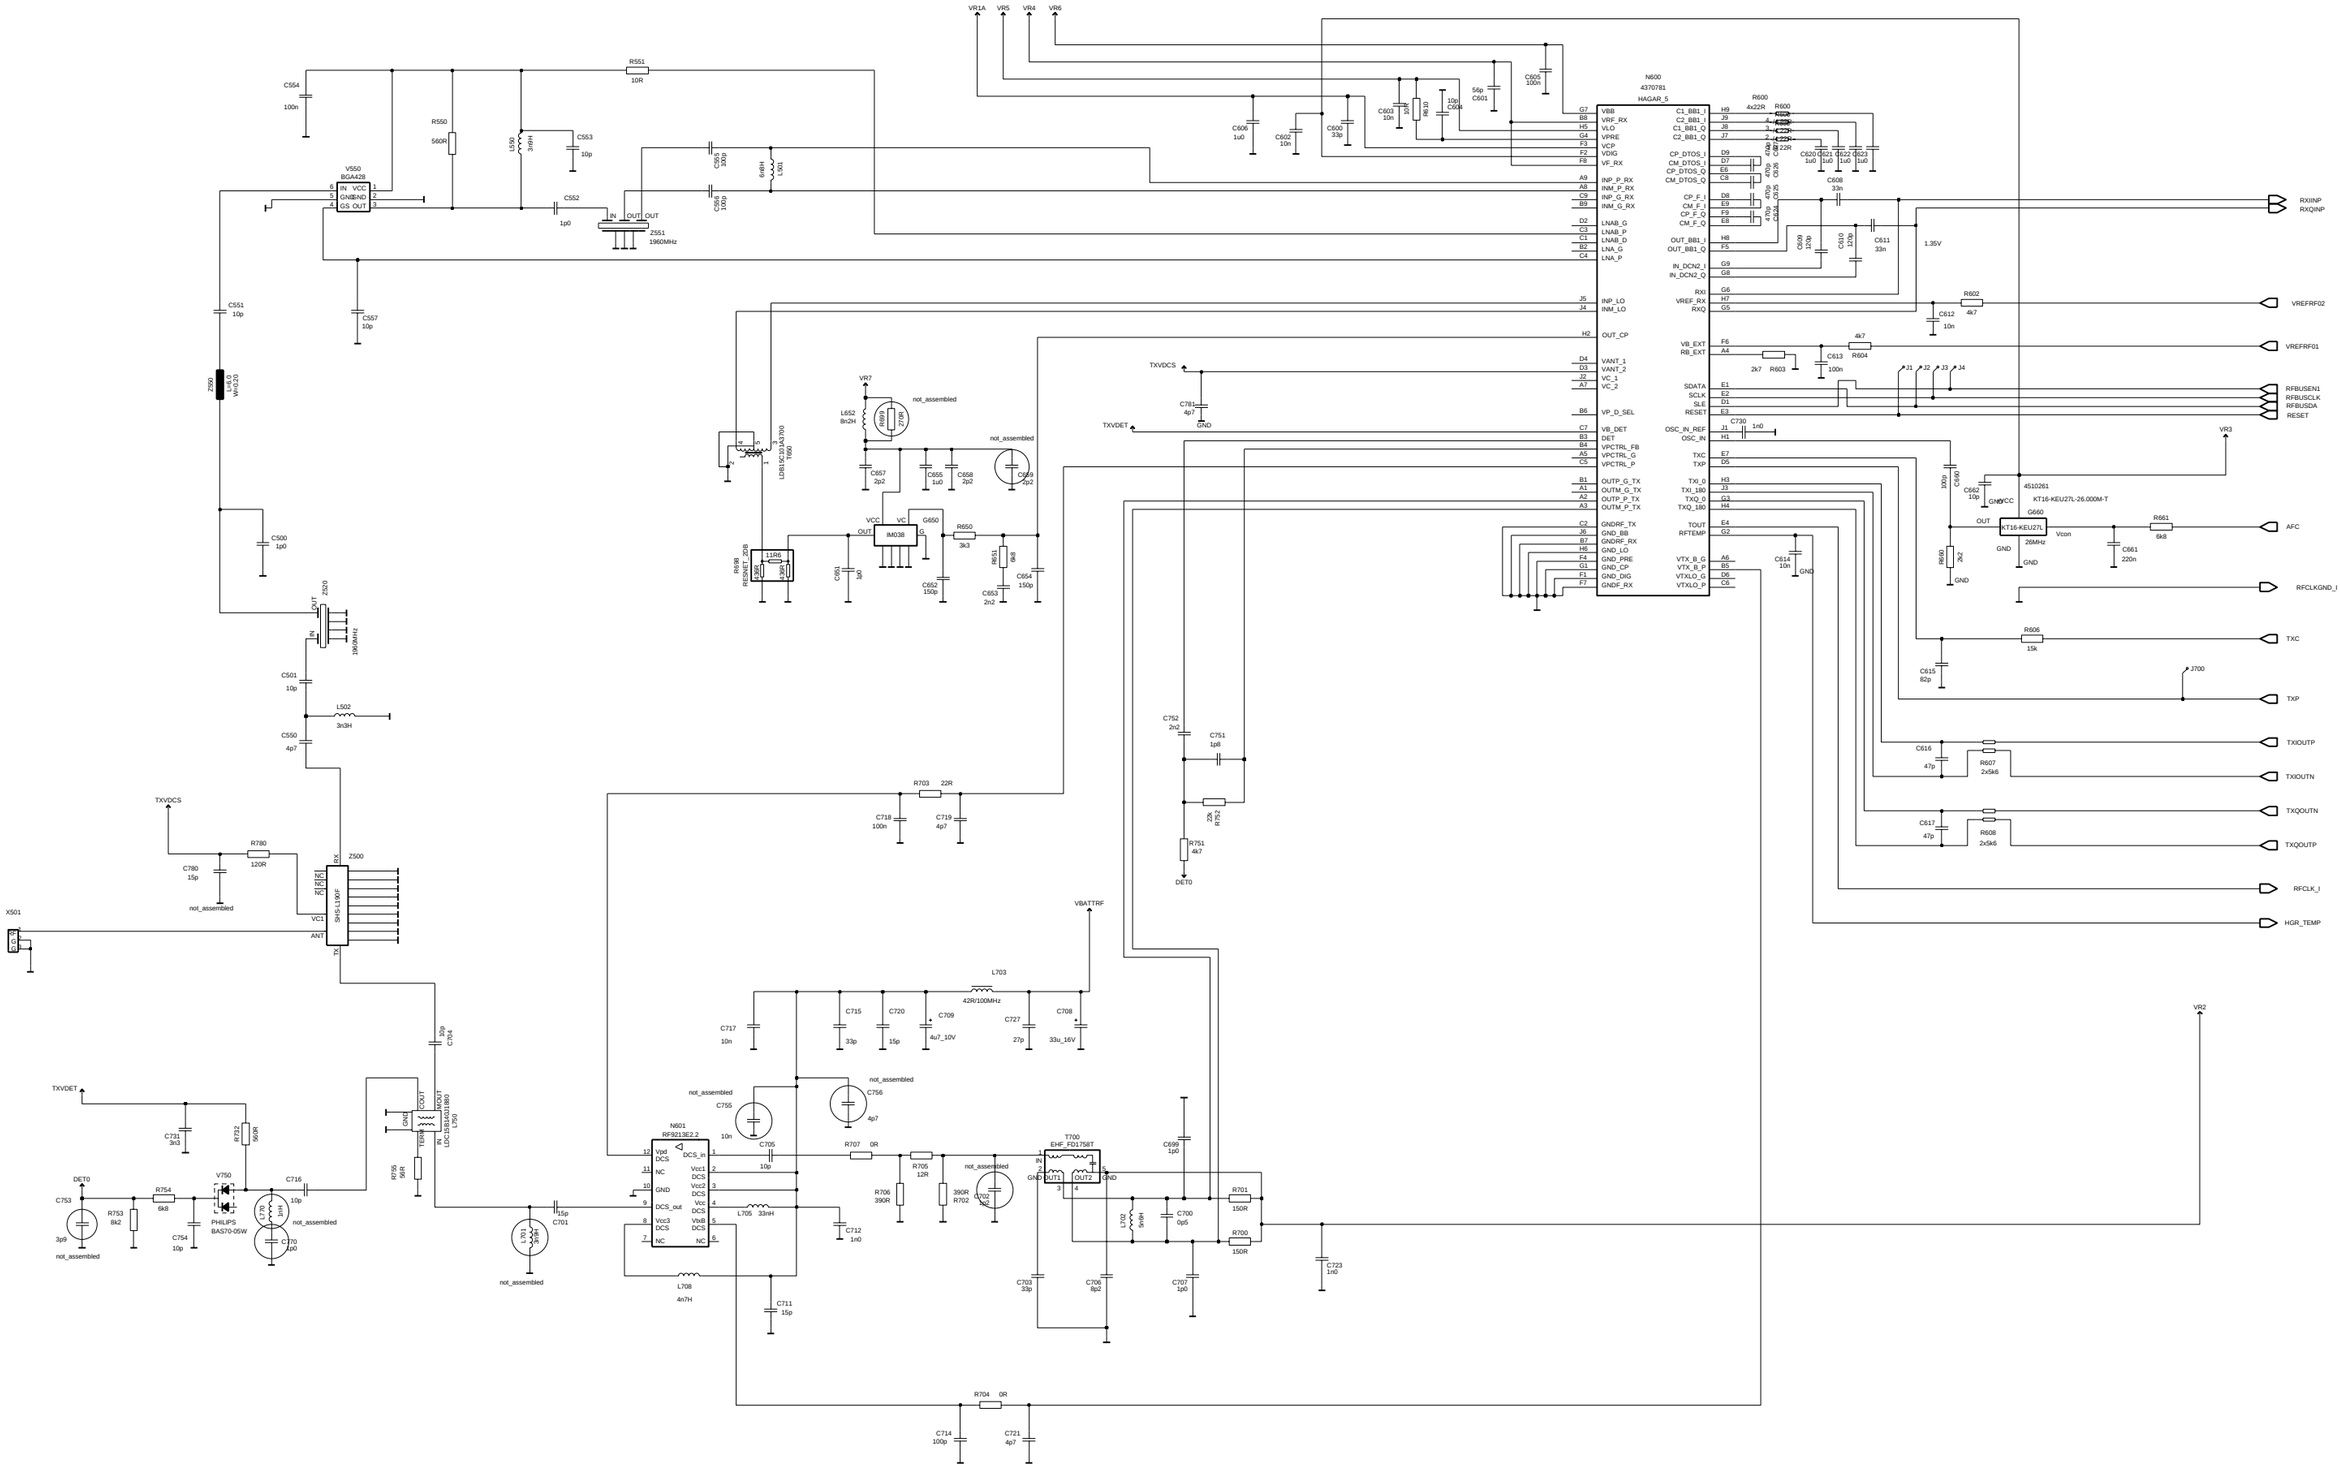

©Nokia Corporation

BB Connections (v.06.01 ed.263 for version 06)

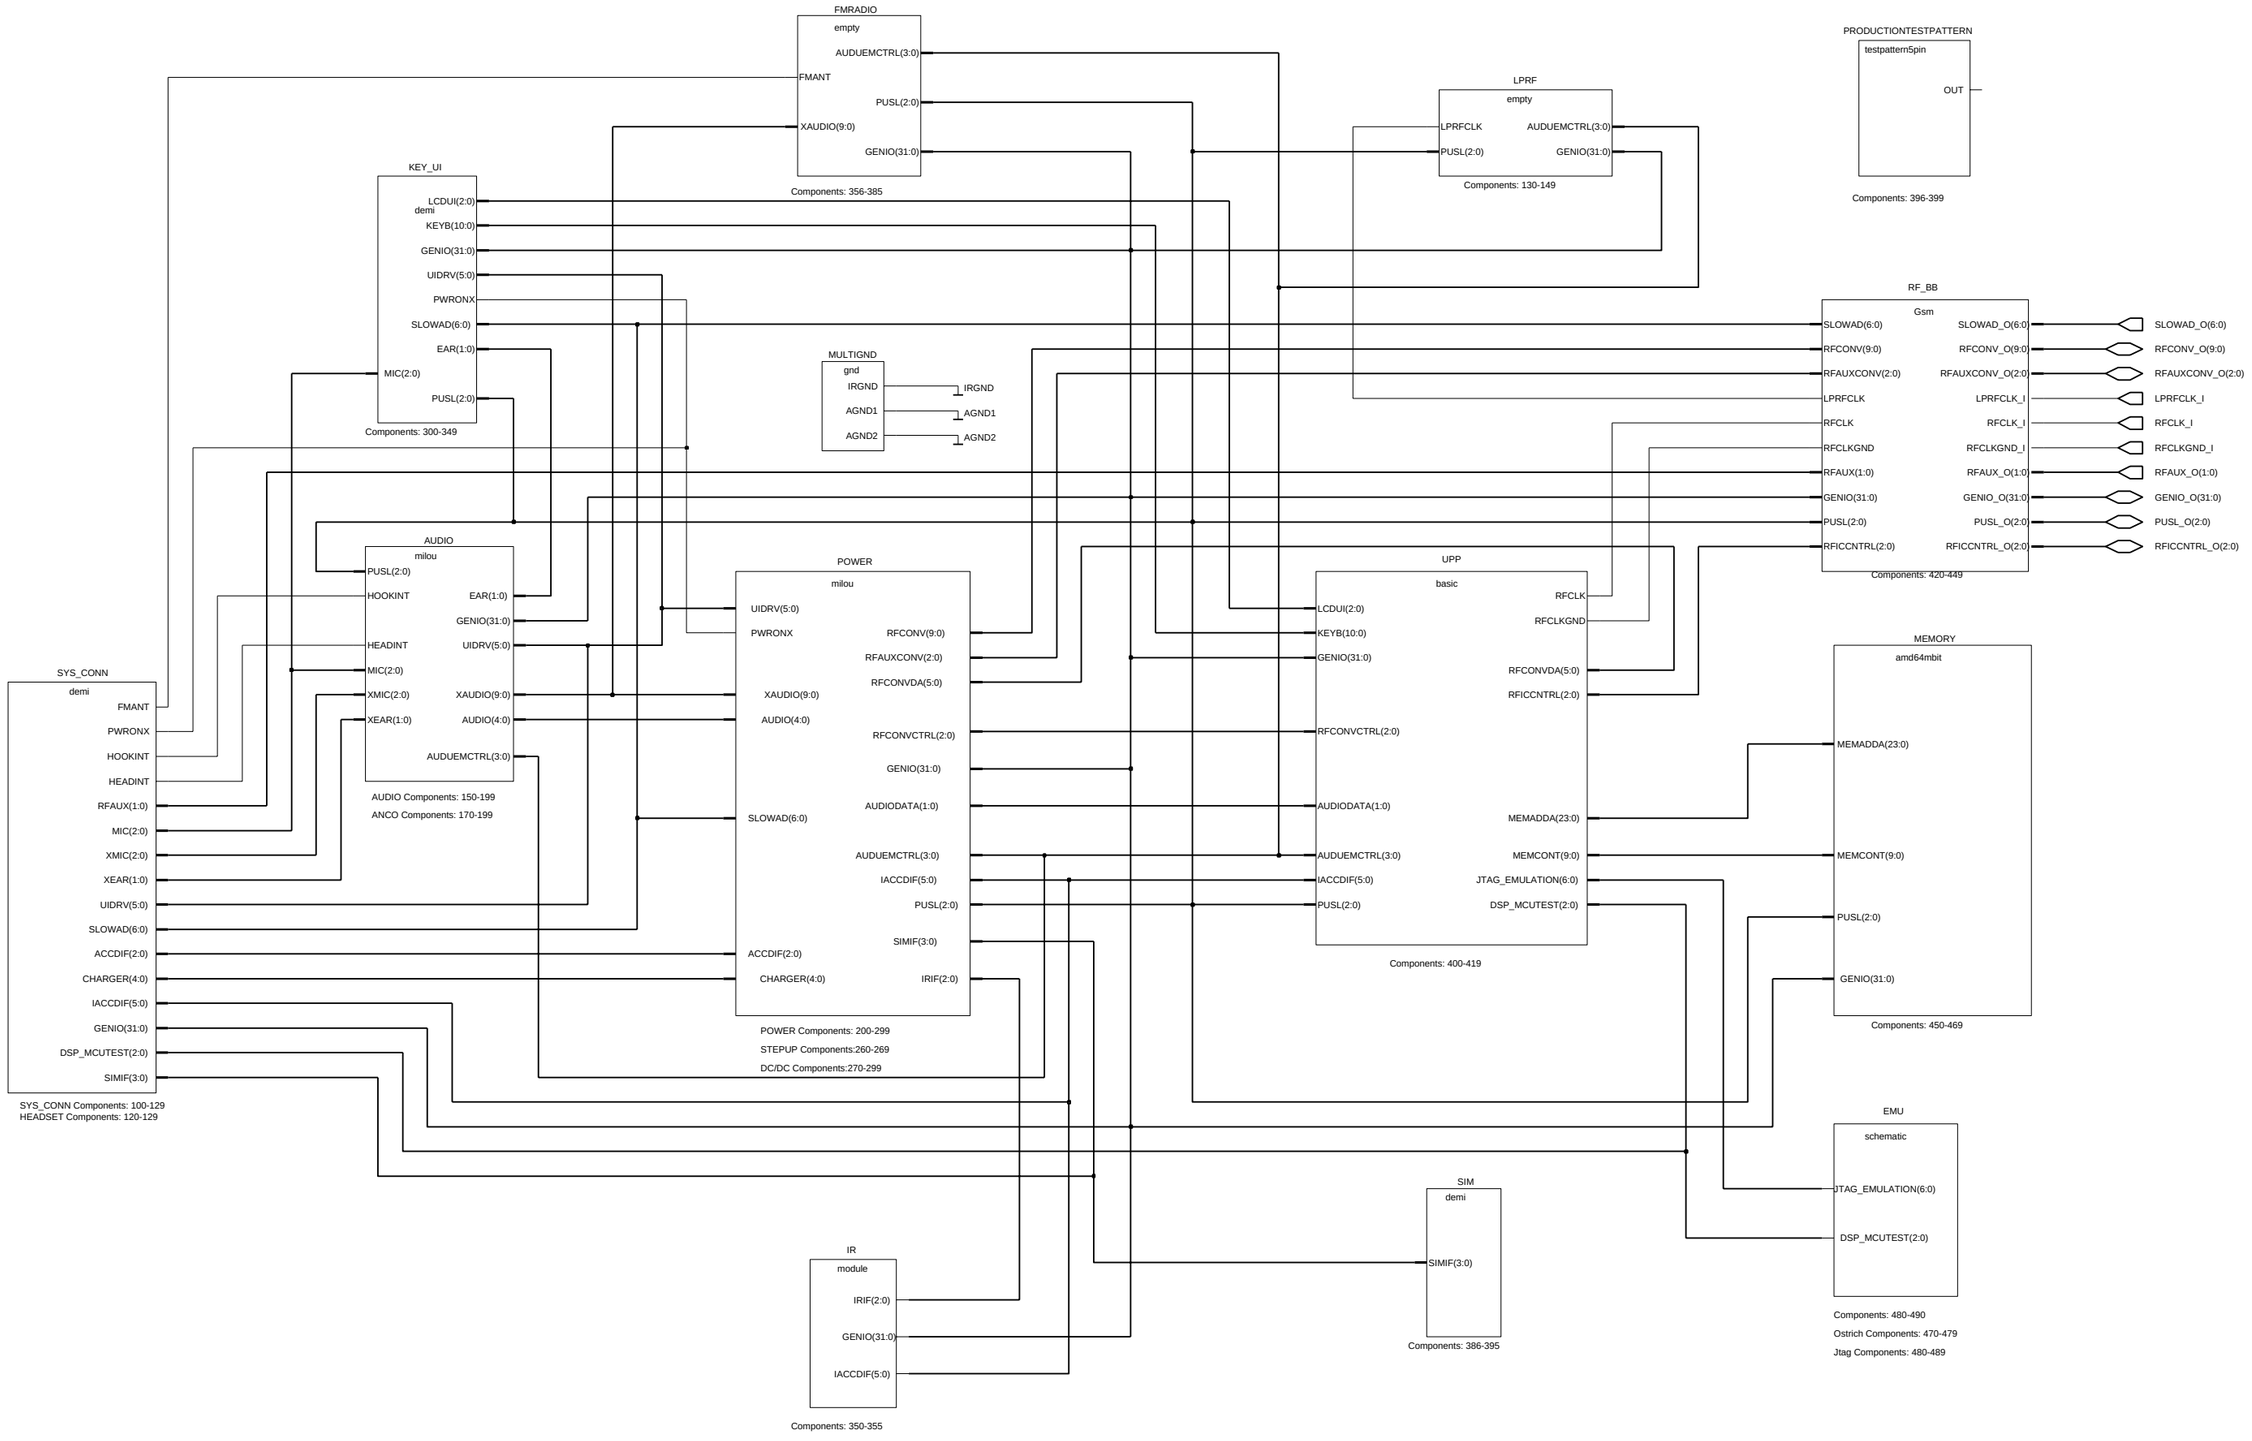

System Connector (v.06.01 ed.148 for version 06)

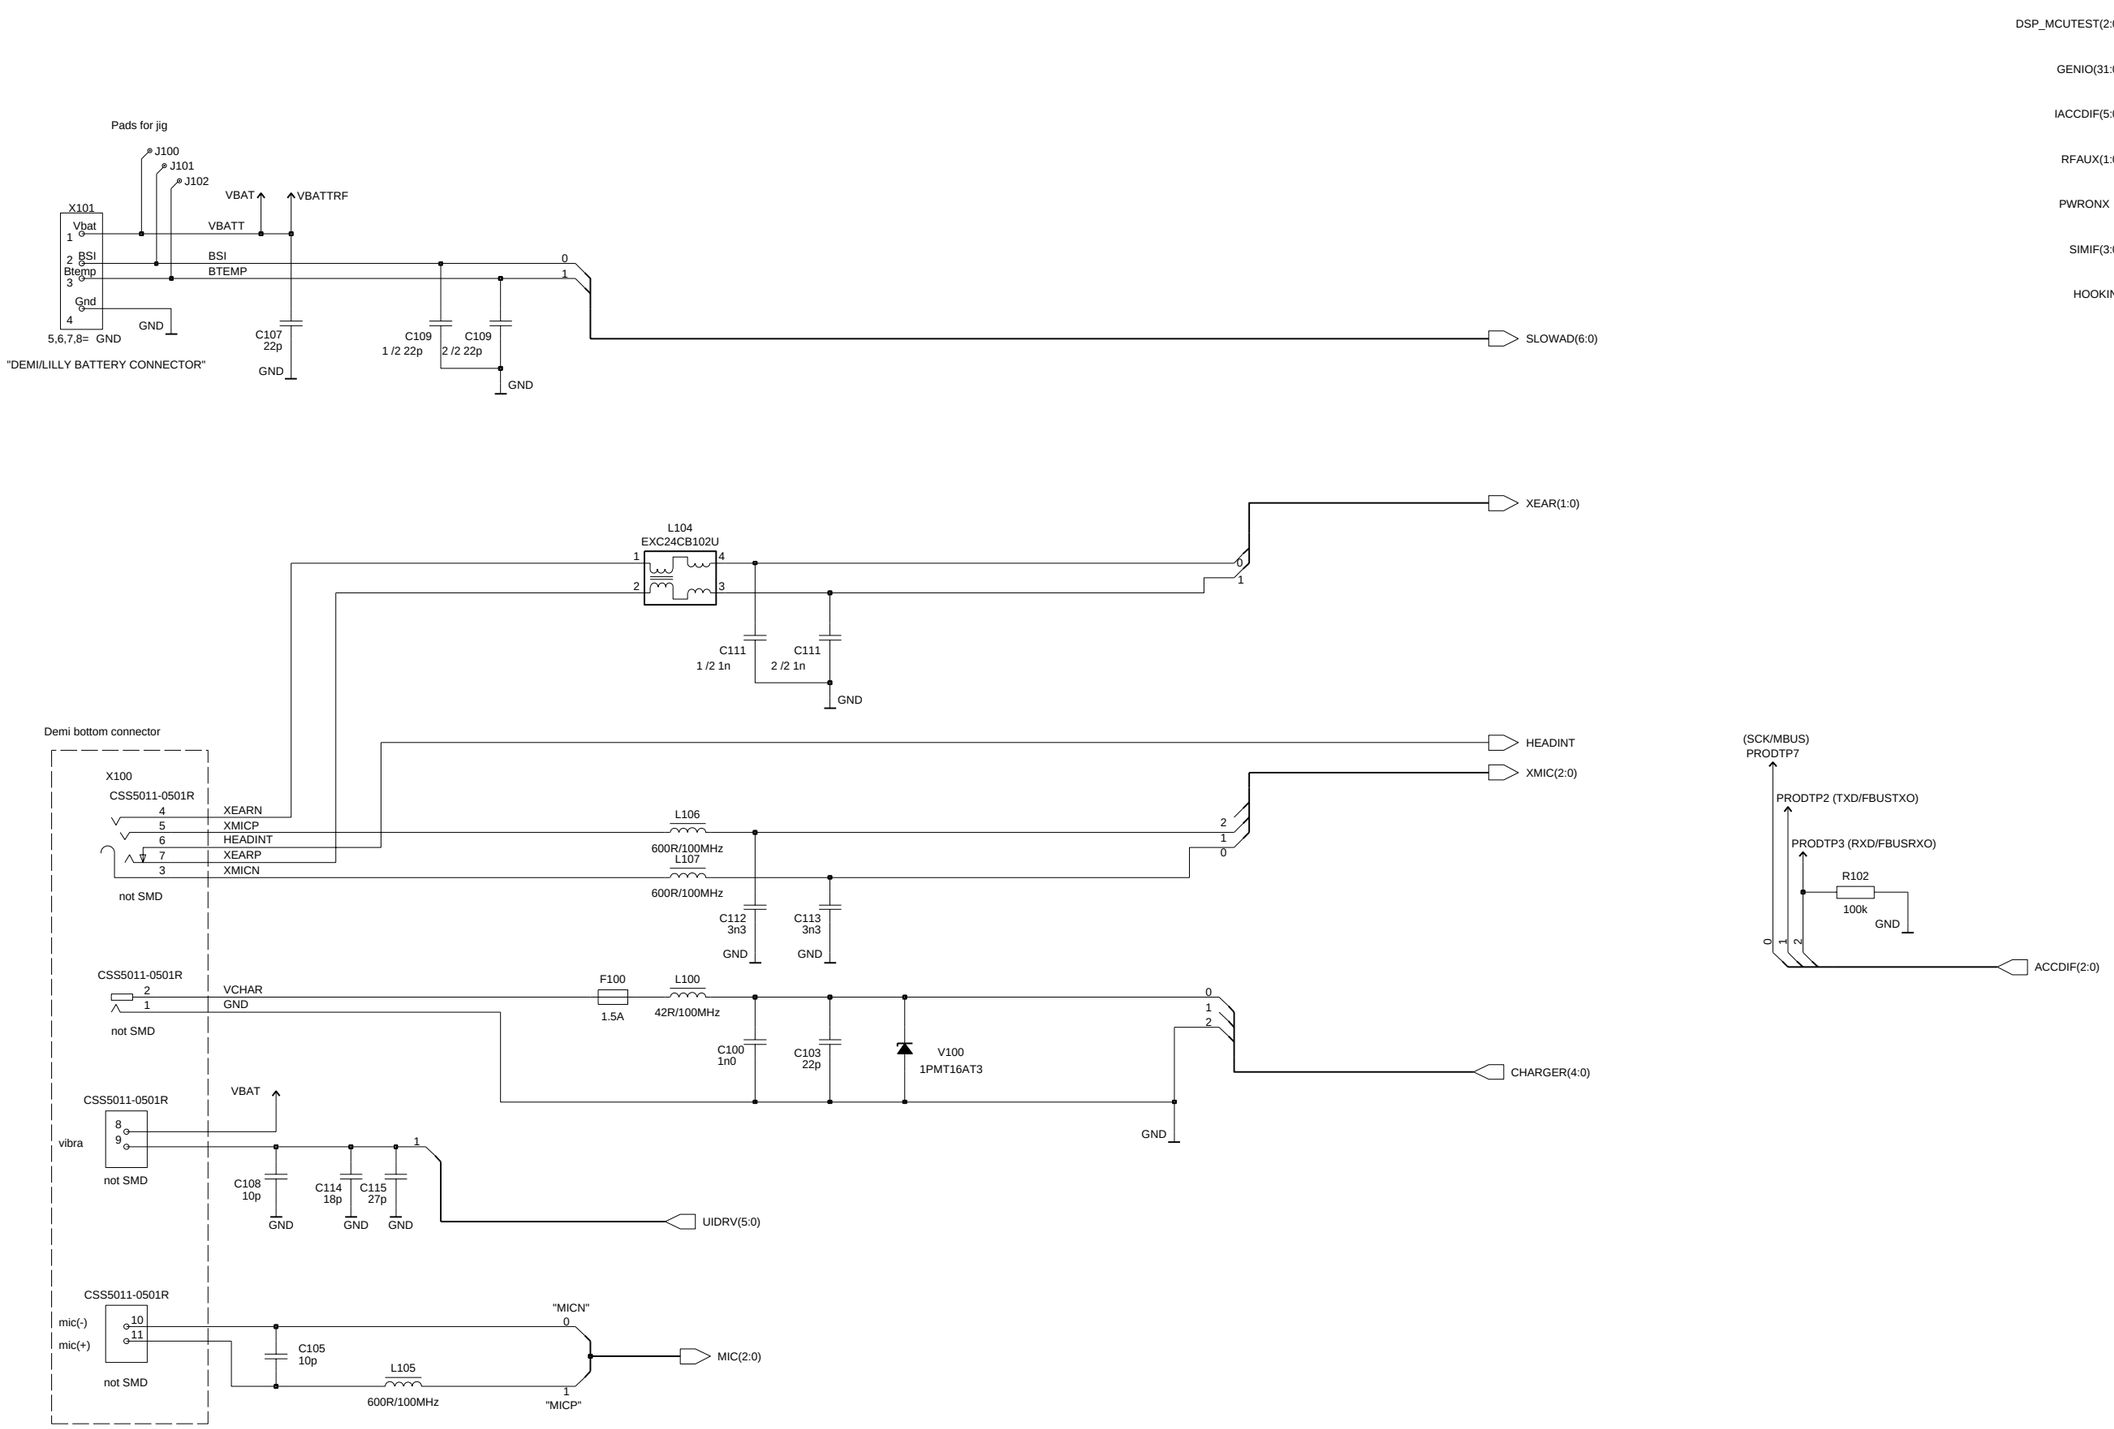

©Nokia Corporation

Audio Interface (v.06.01 ed.90 for version 06)

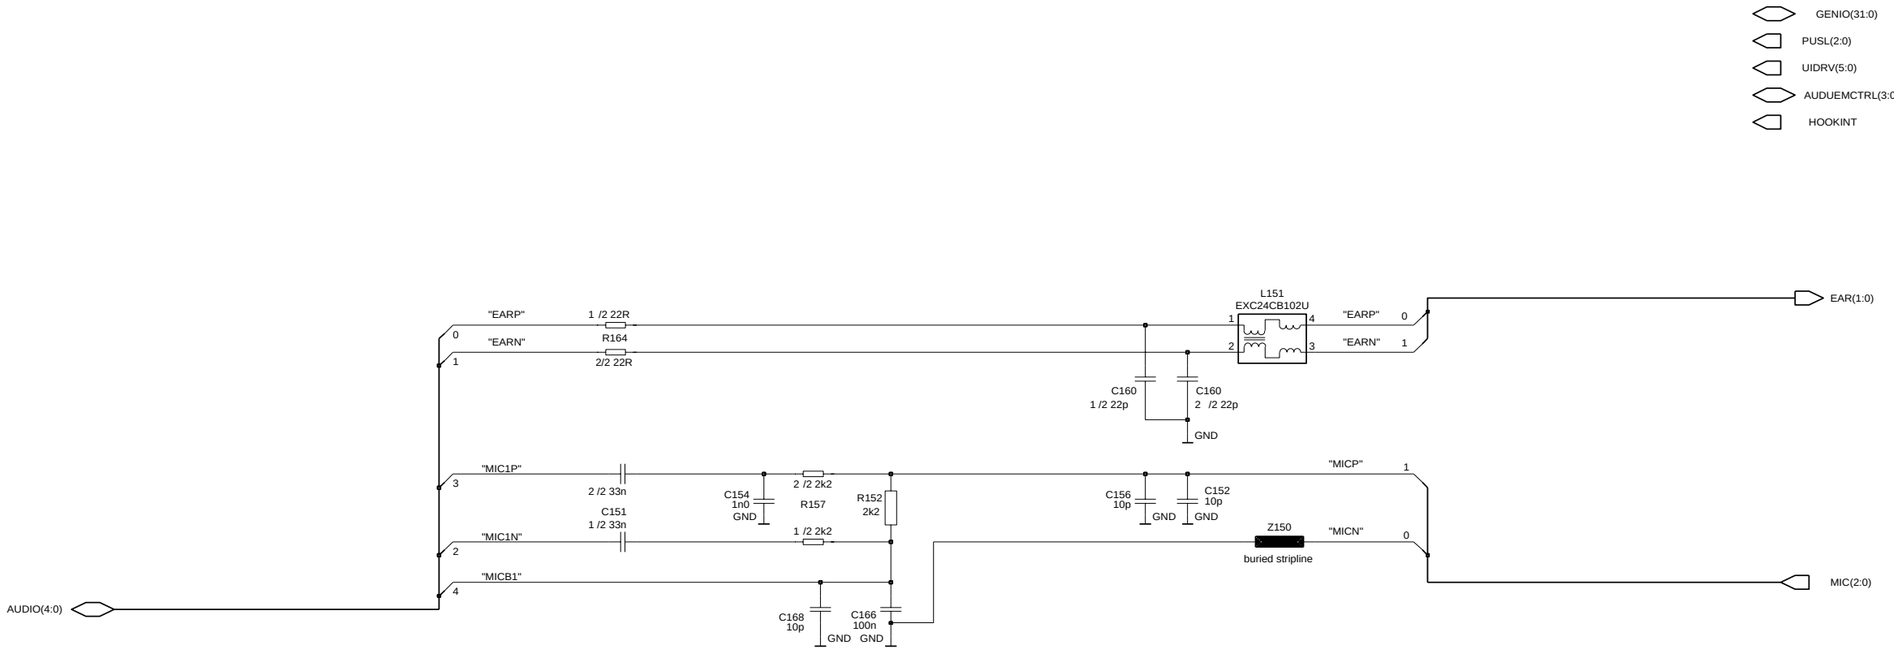

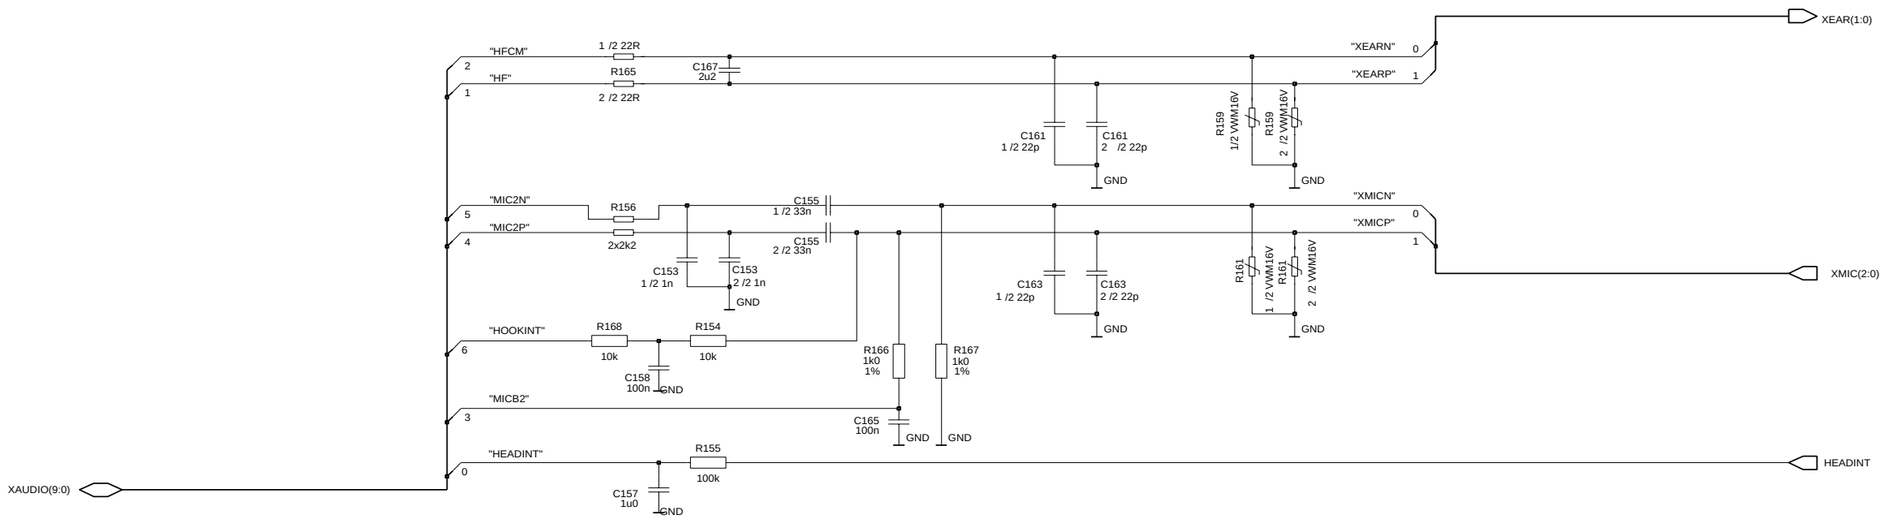

C151 - 158, C160, C161, C163, C165 - 168
R152, R154 - 157, R159, R161, R164 - 168
L151
Z150

©Nokia Corporation

UEM of BB (v.06.01 ed.151 for version 06)

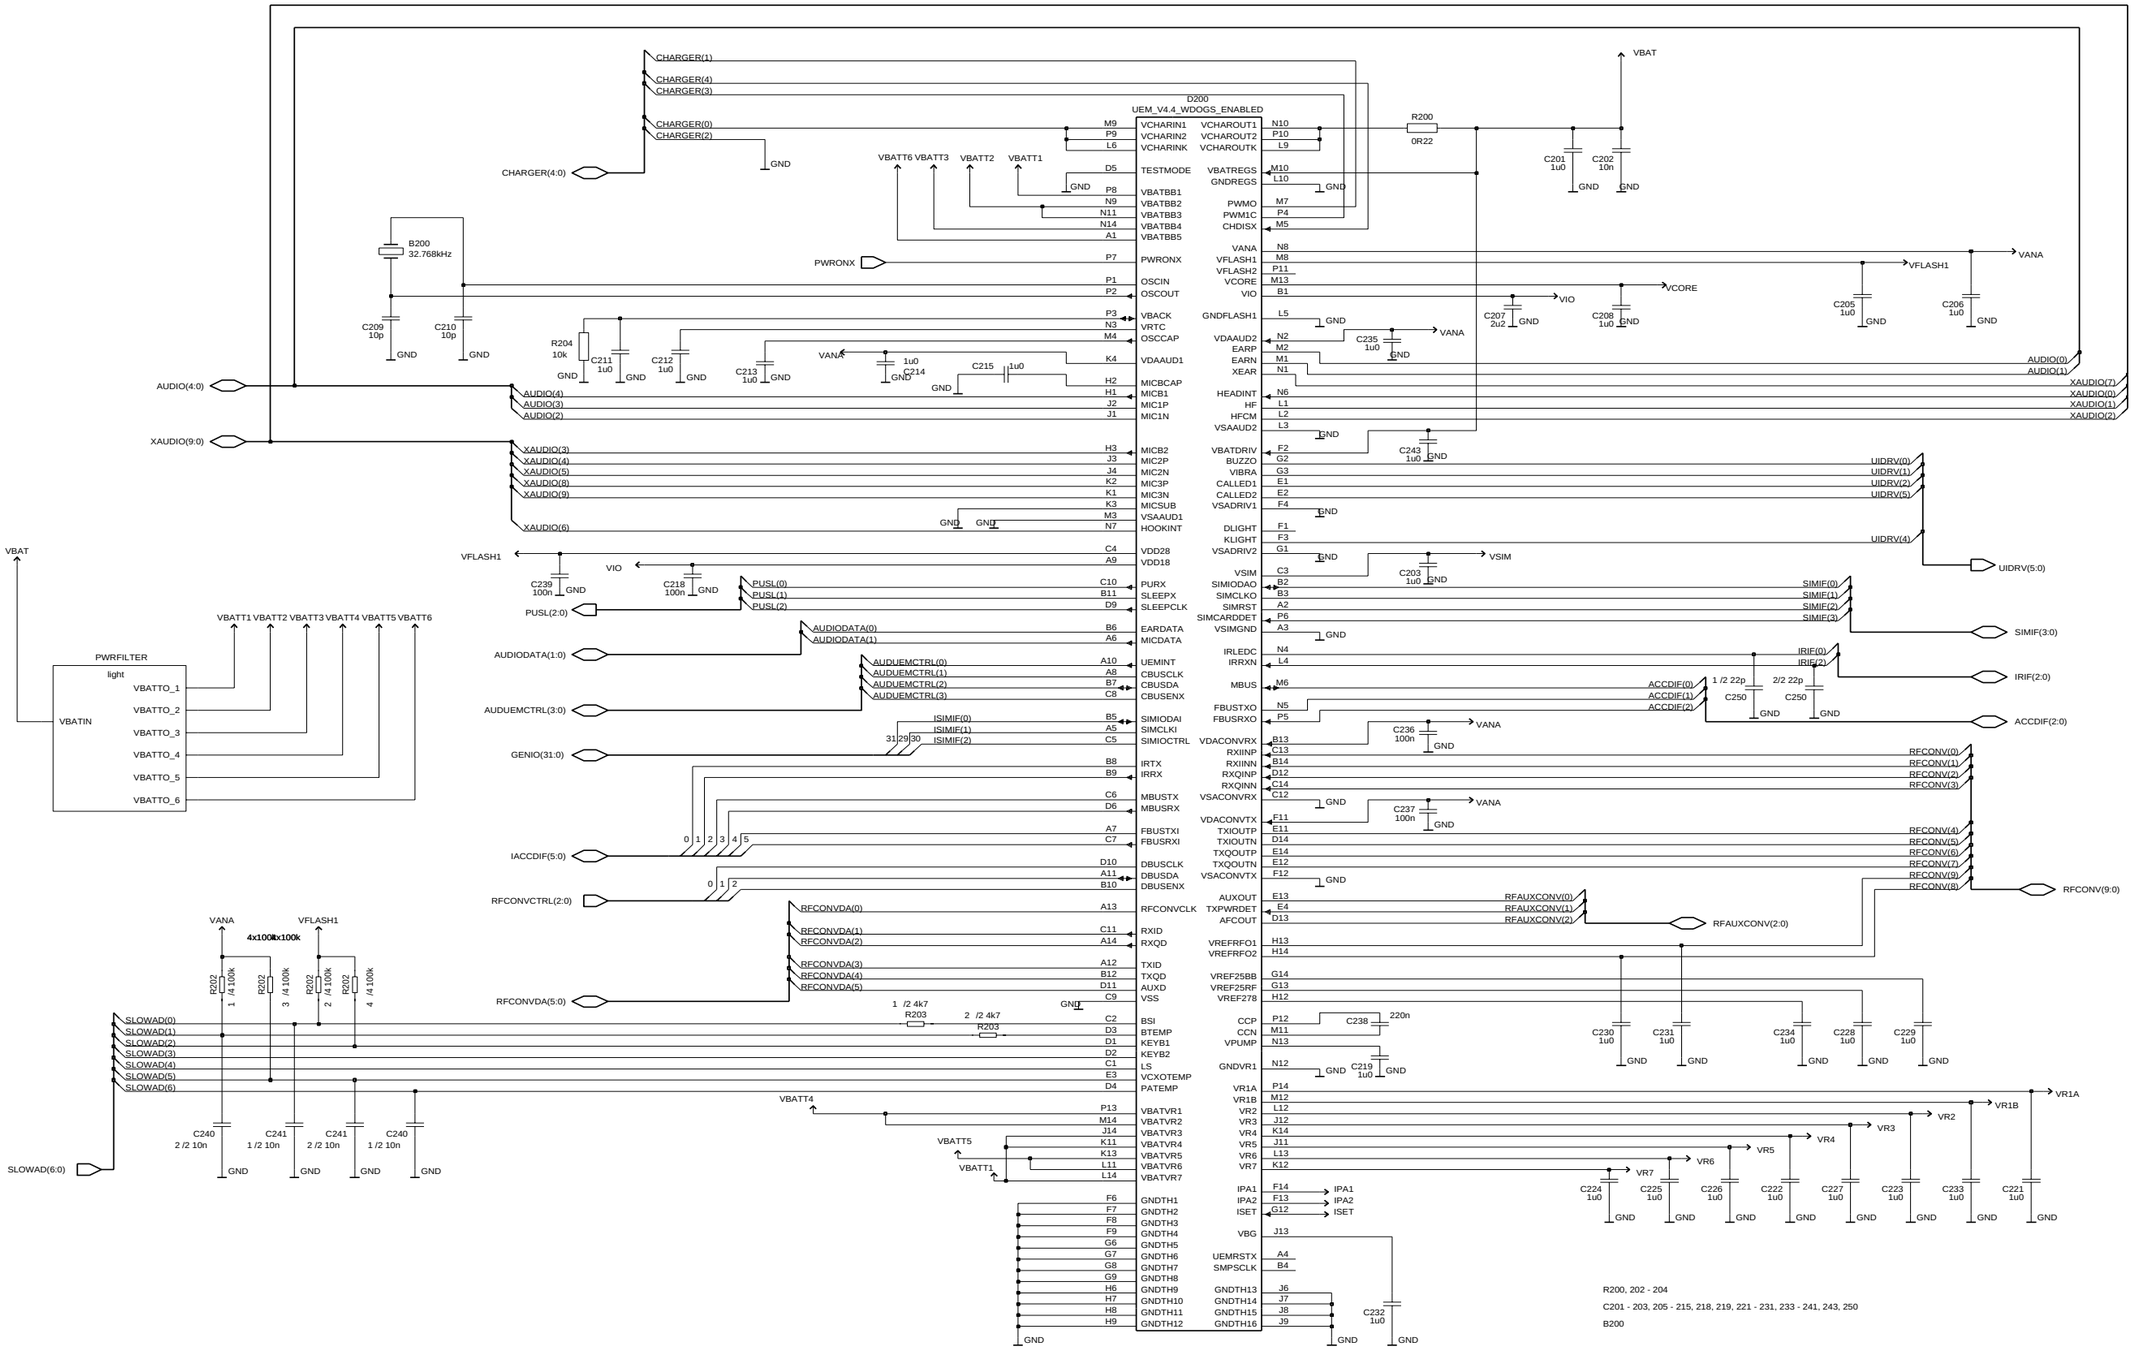

UEM VBAT Filtering (v.06.01 ed.45 for version 06)

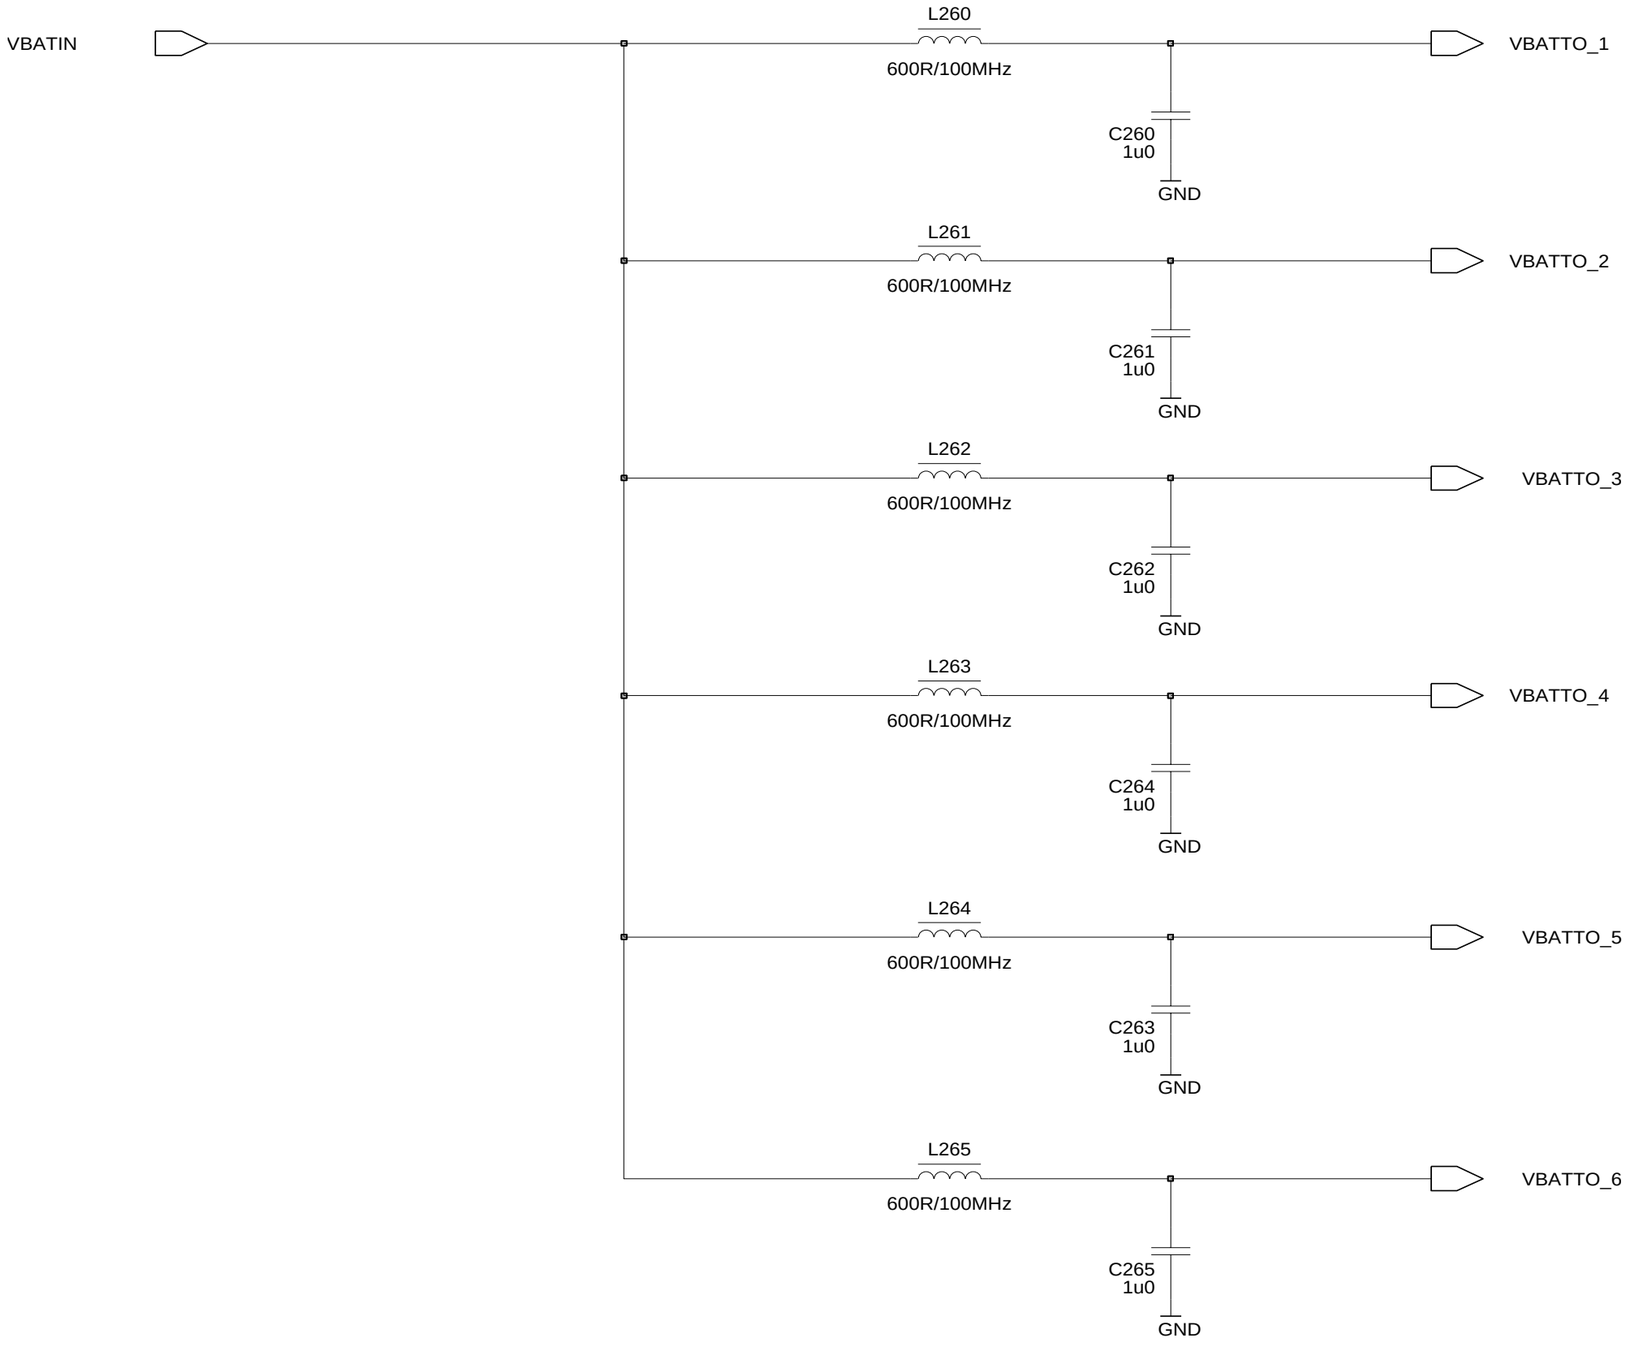

C260 - 265

L260 - 265

©Nokia Corporation

Display and Keyboard Interface (v.06.01 ed.201 for version 06)

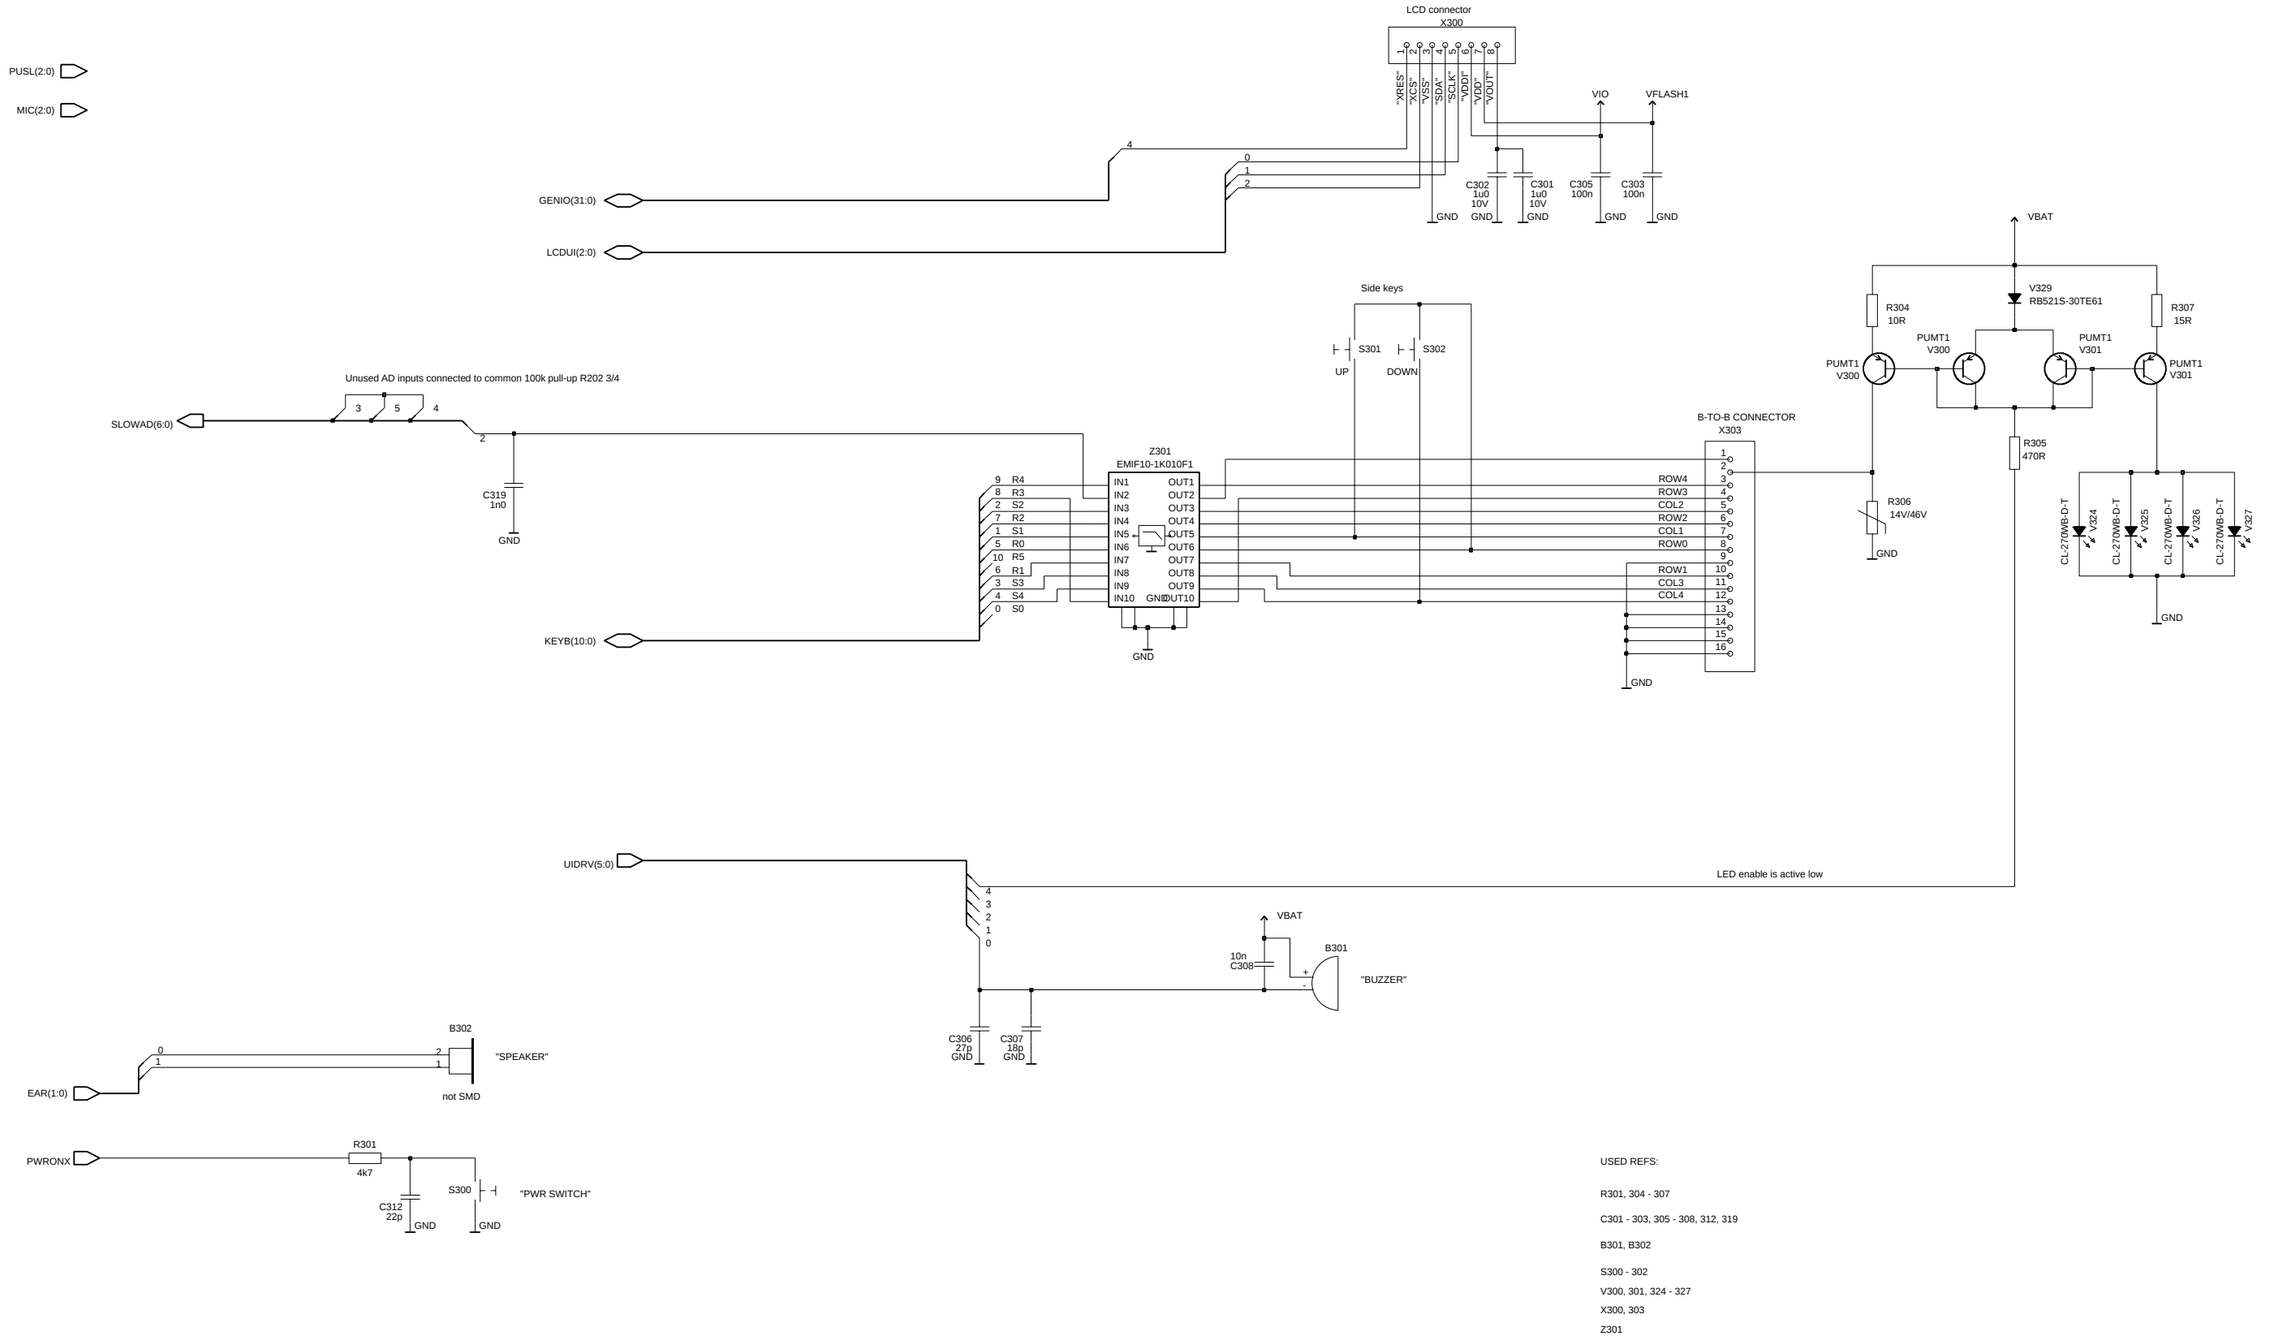

USED REFS:

R301, 304 - 307

C301 - 303, 305 - 308, 312, 319

B301, B302

S300 - 302

V300, 301, 324 - 327

X300, 303

Z301

©Nokia Corporation

Infrared Module (v.06.01 ed.46 for version 06)

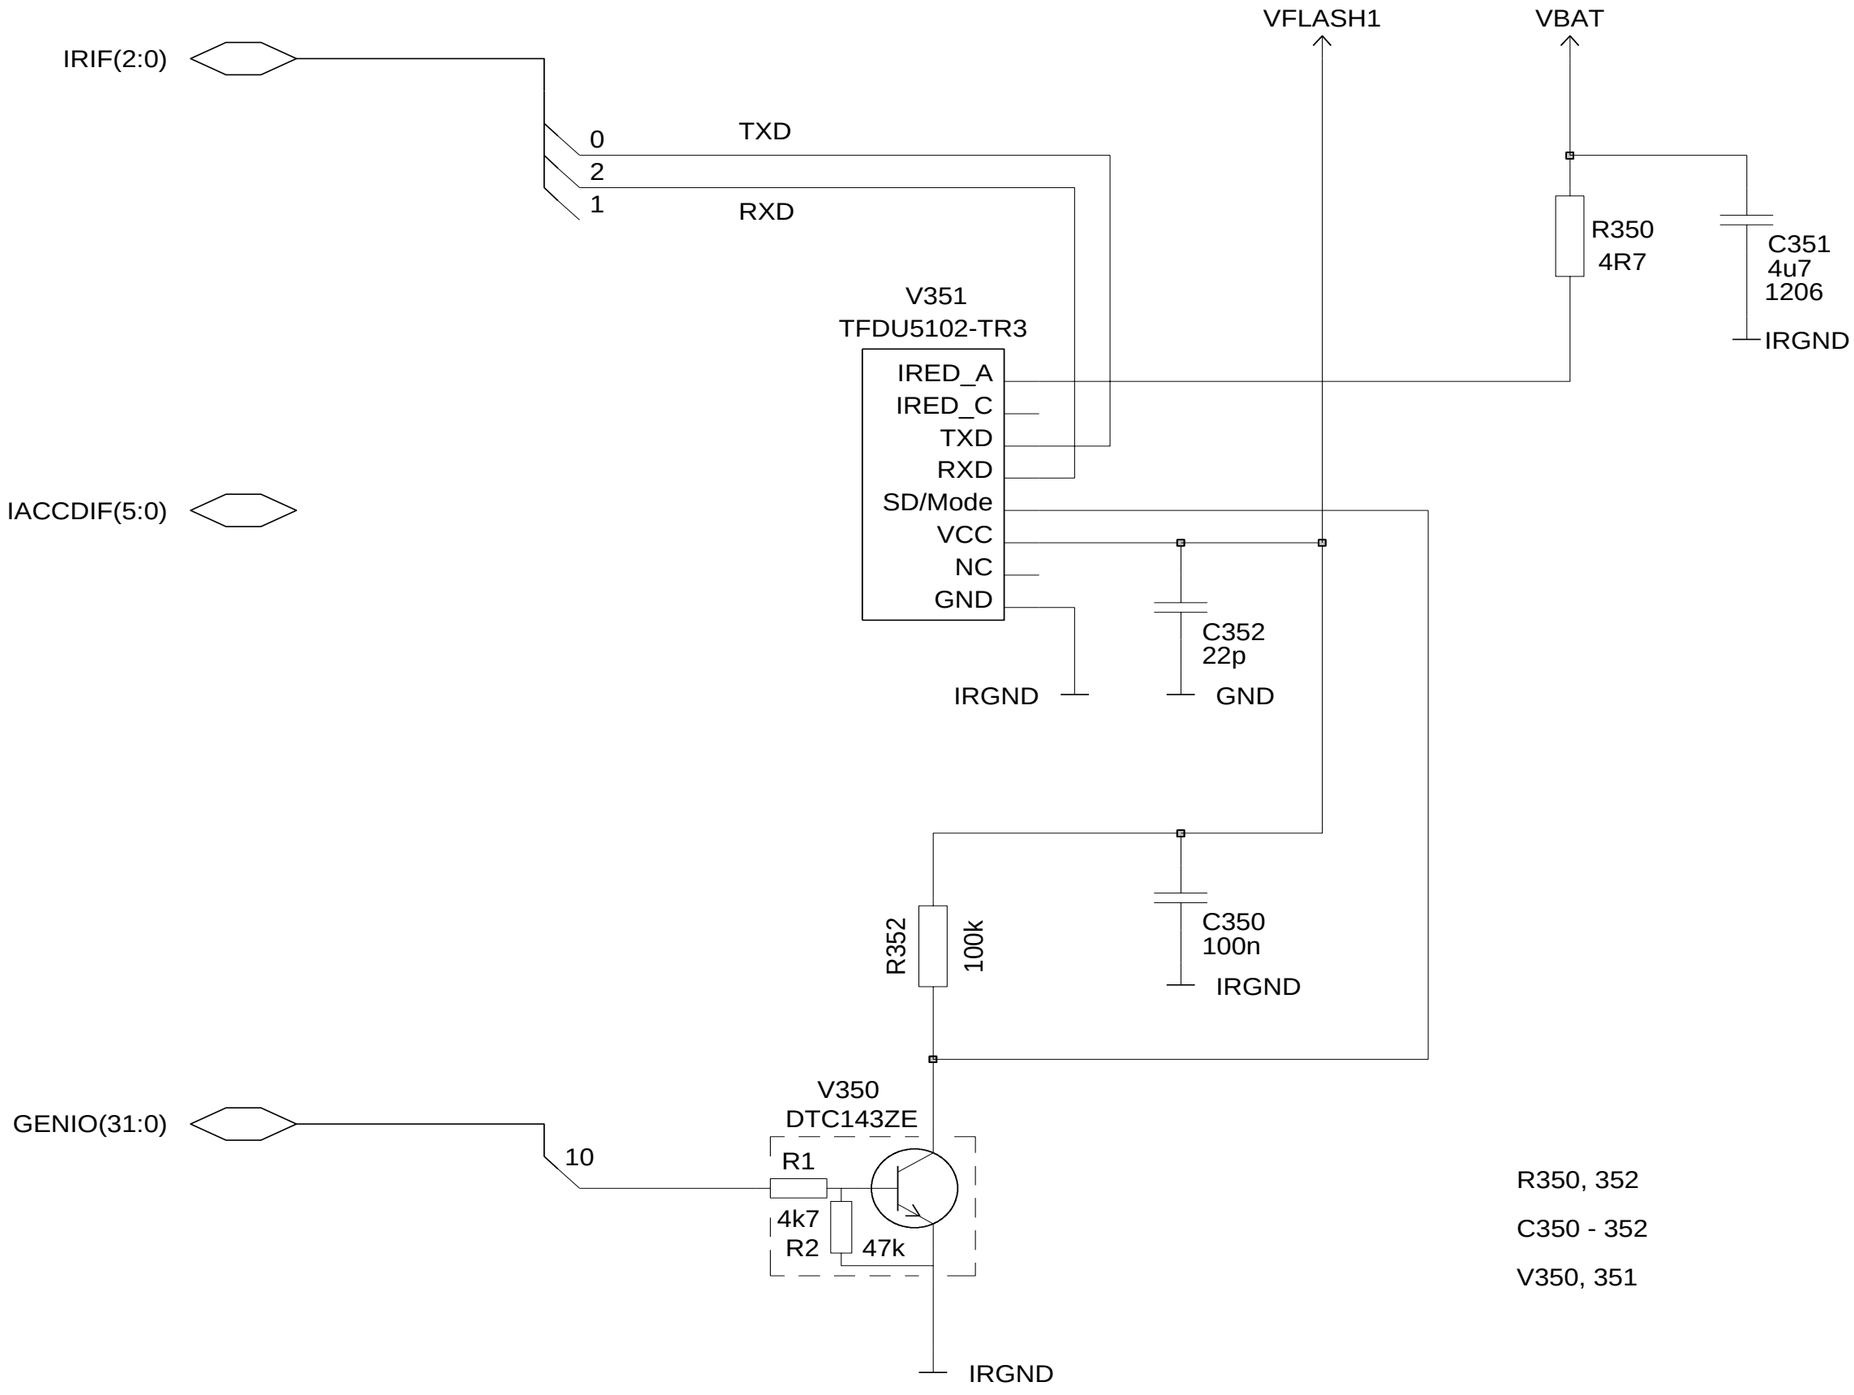

R350, 352

C350 - 352

V350, 351

©Nokia Corporation

SIM Reader (v.06.01 ed.52 for version 06)

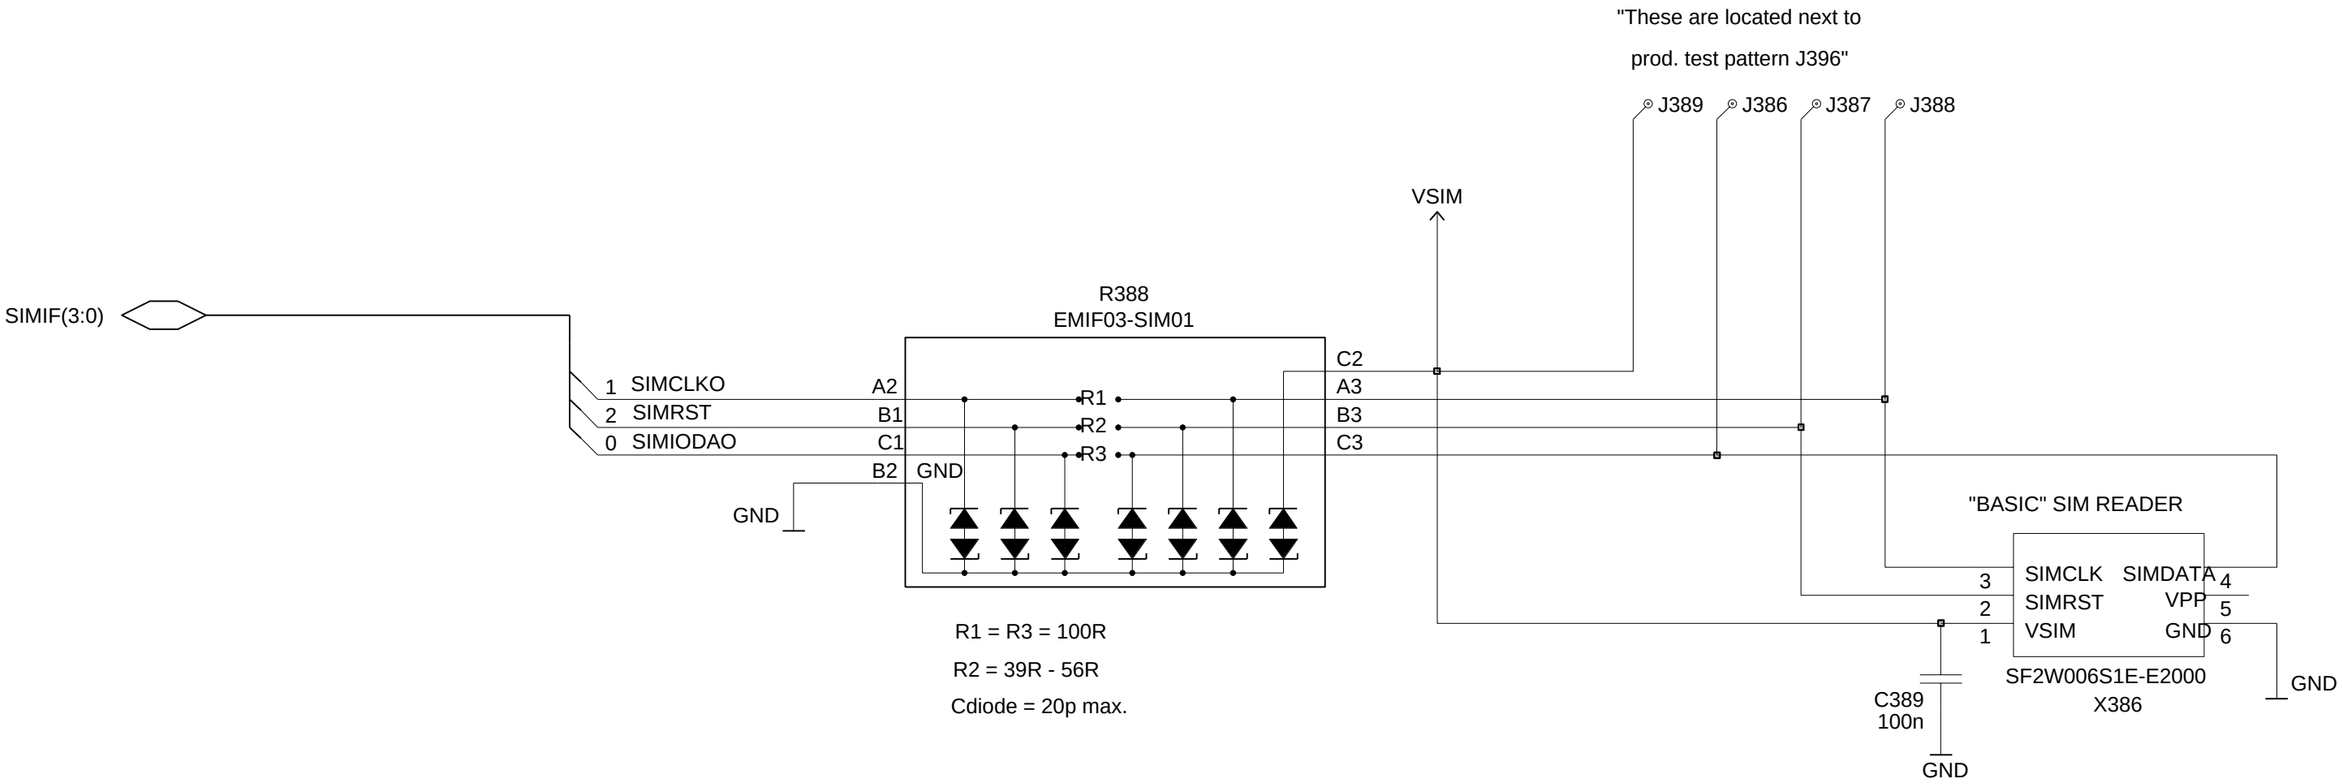

©Nokia Corporation

UPP of BB (v.06.01 ed.91 for version 06)

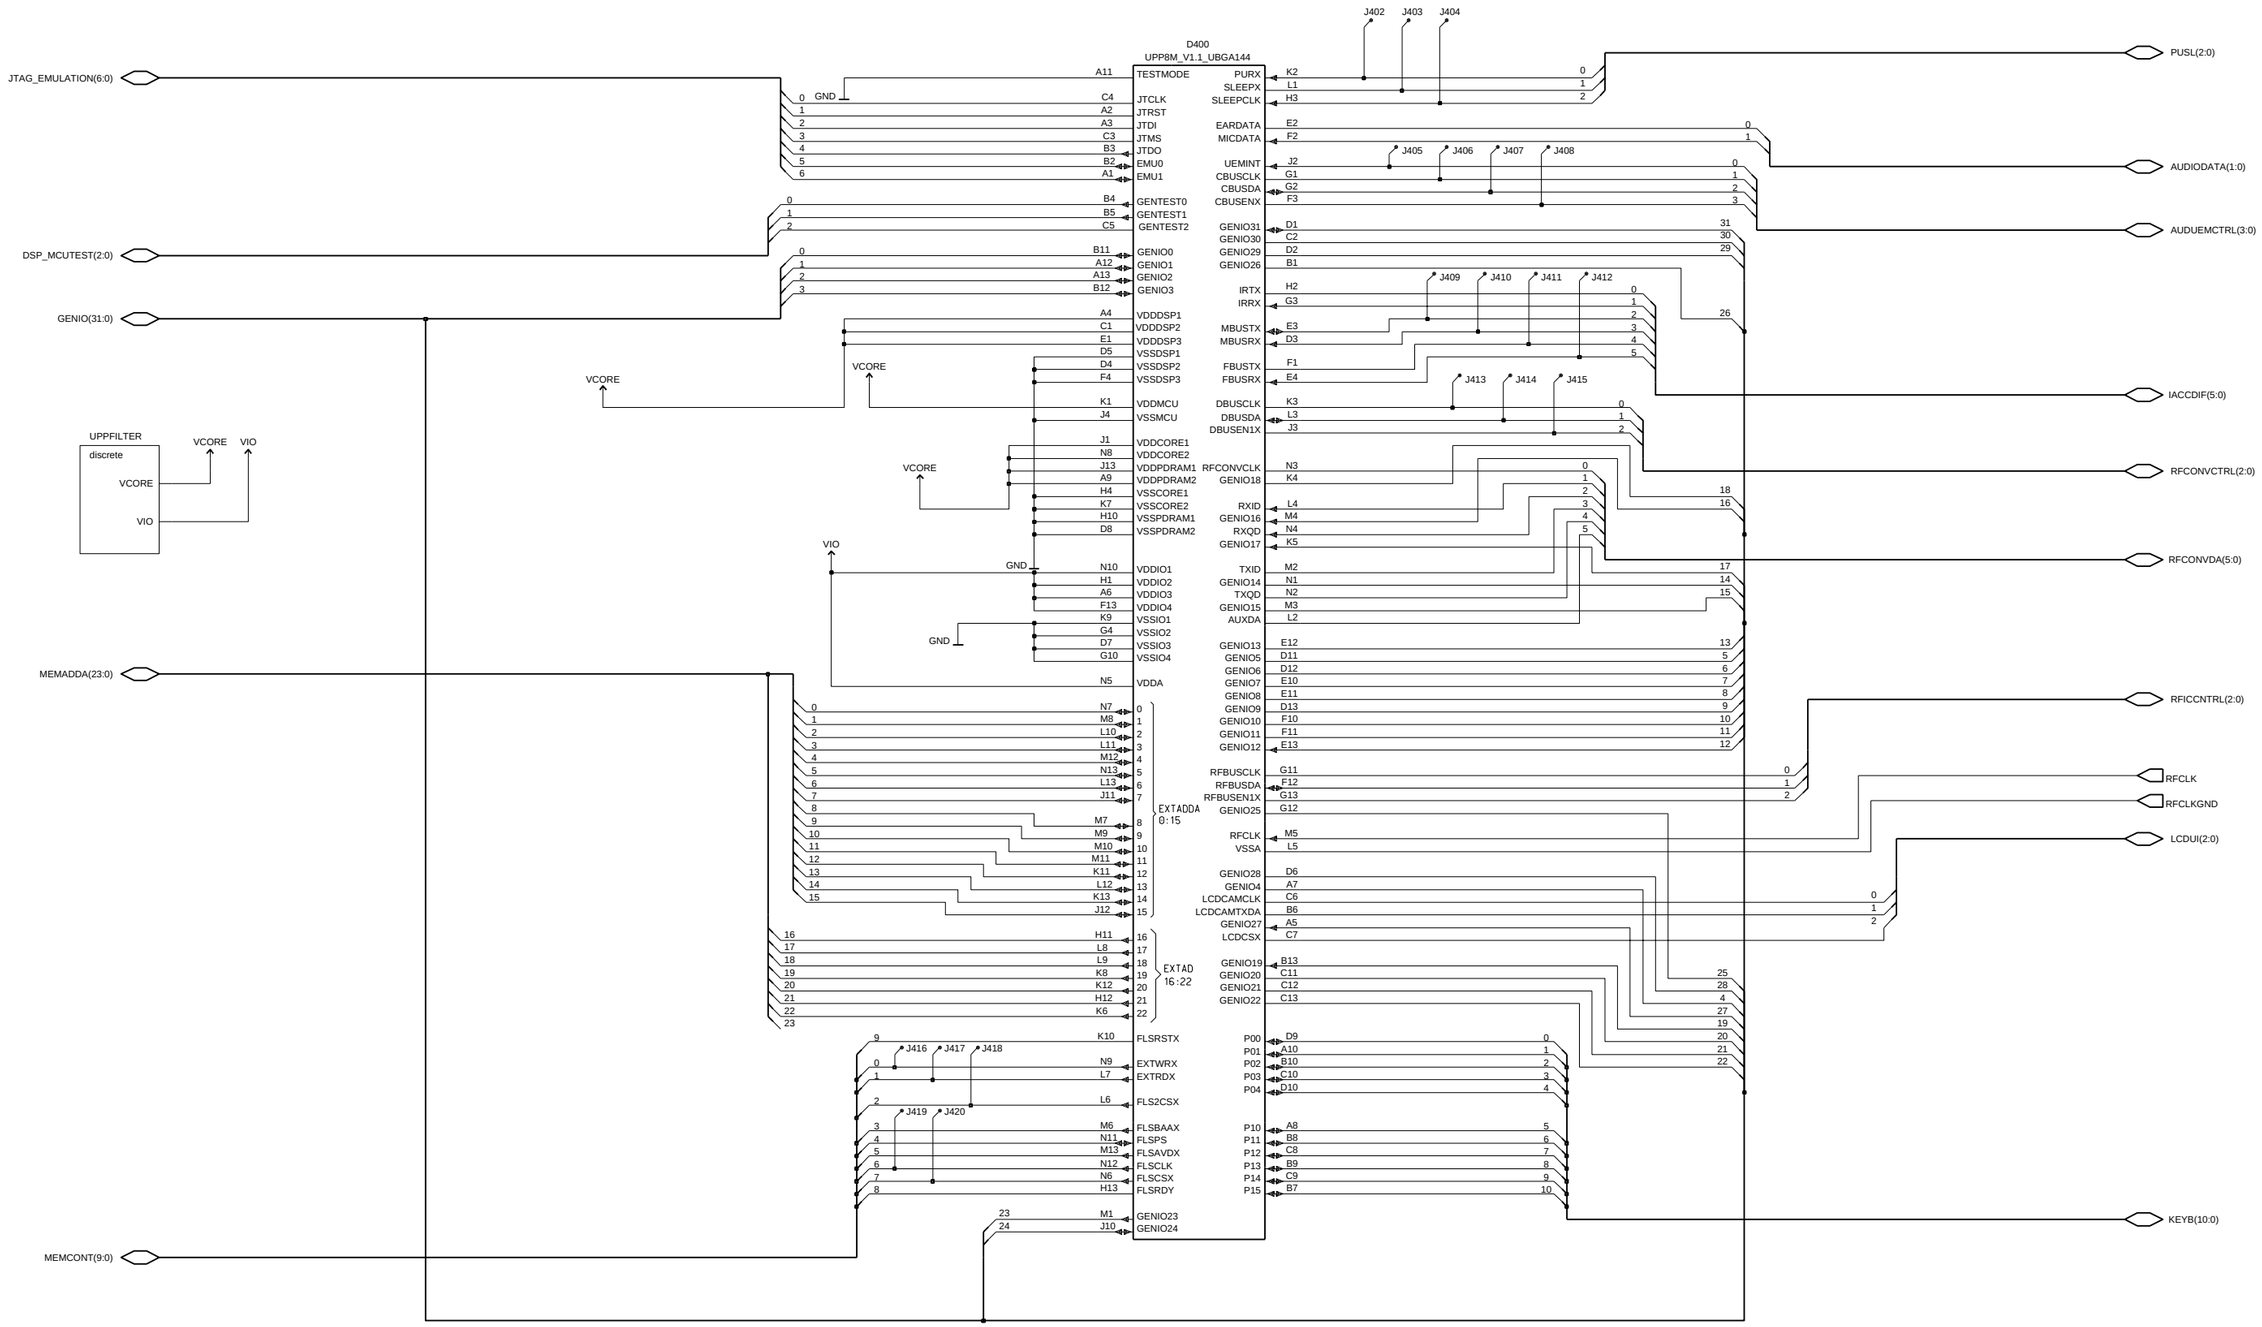

©Nokia Corporation

Decoupling Capacitors of UPP (v.06.01 ed.14 for version 06)

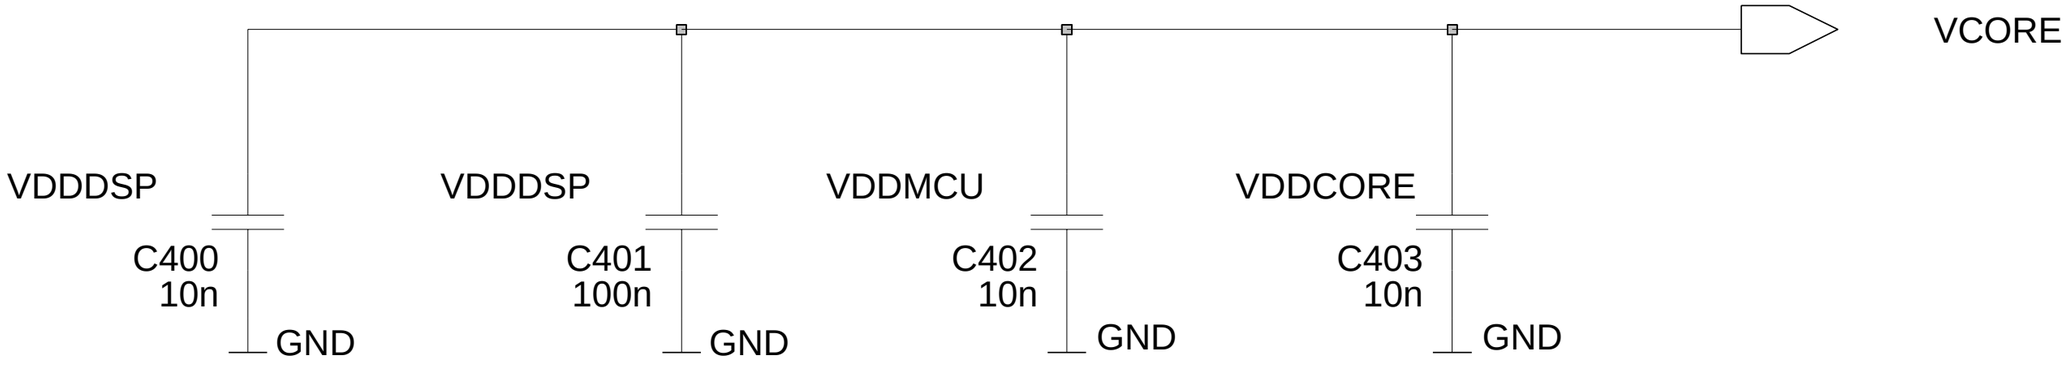

C400 - 405

©Nokia Corporation

RF - BB Interface (v.06.01 ed.41 for version 06)

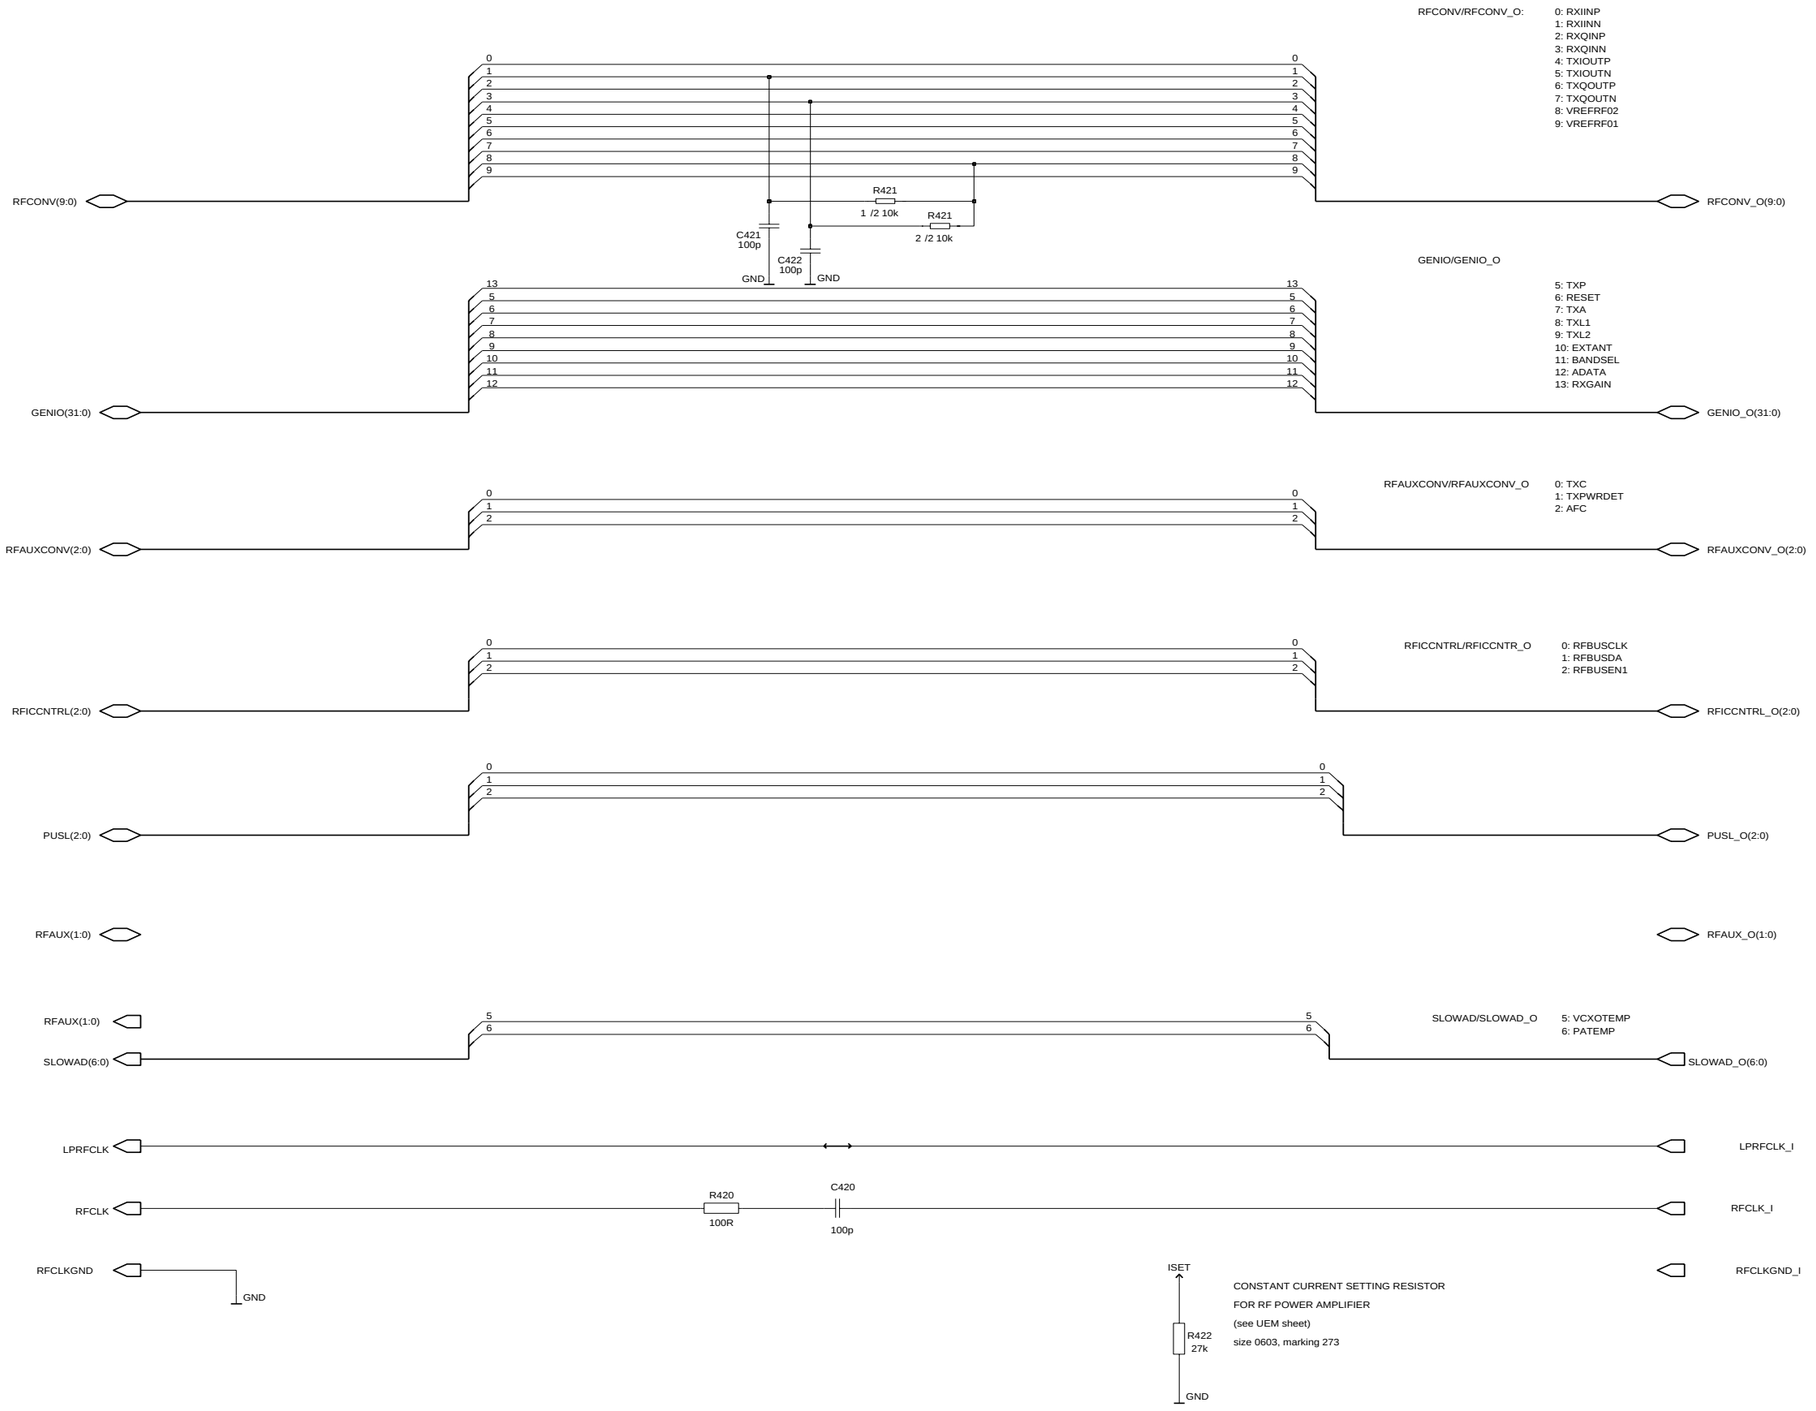

©Nokia Corporation

Flash Memory (v.06.01 ed.38 for version 06)

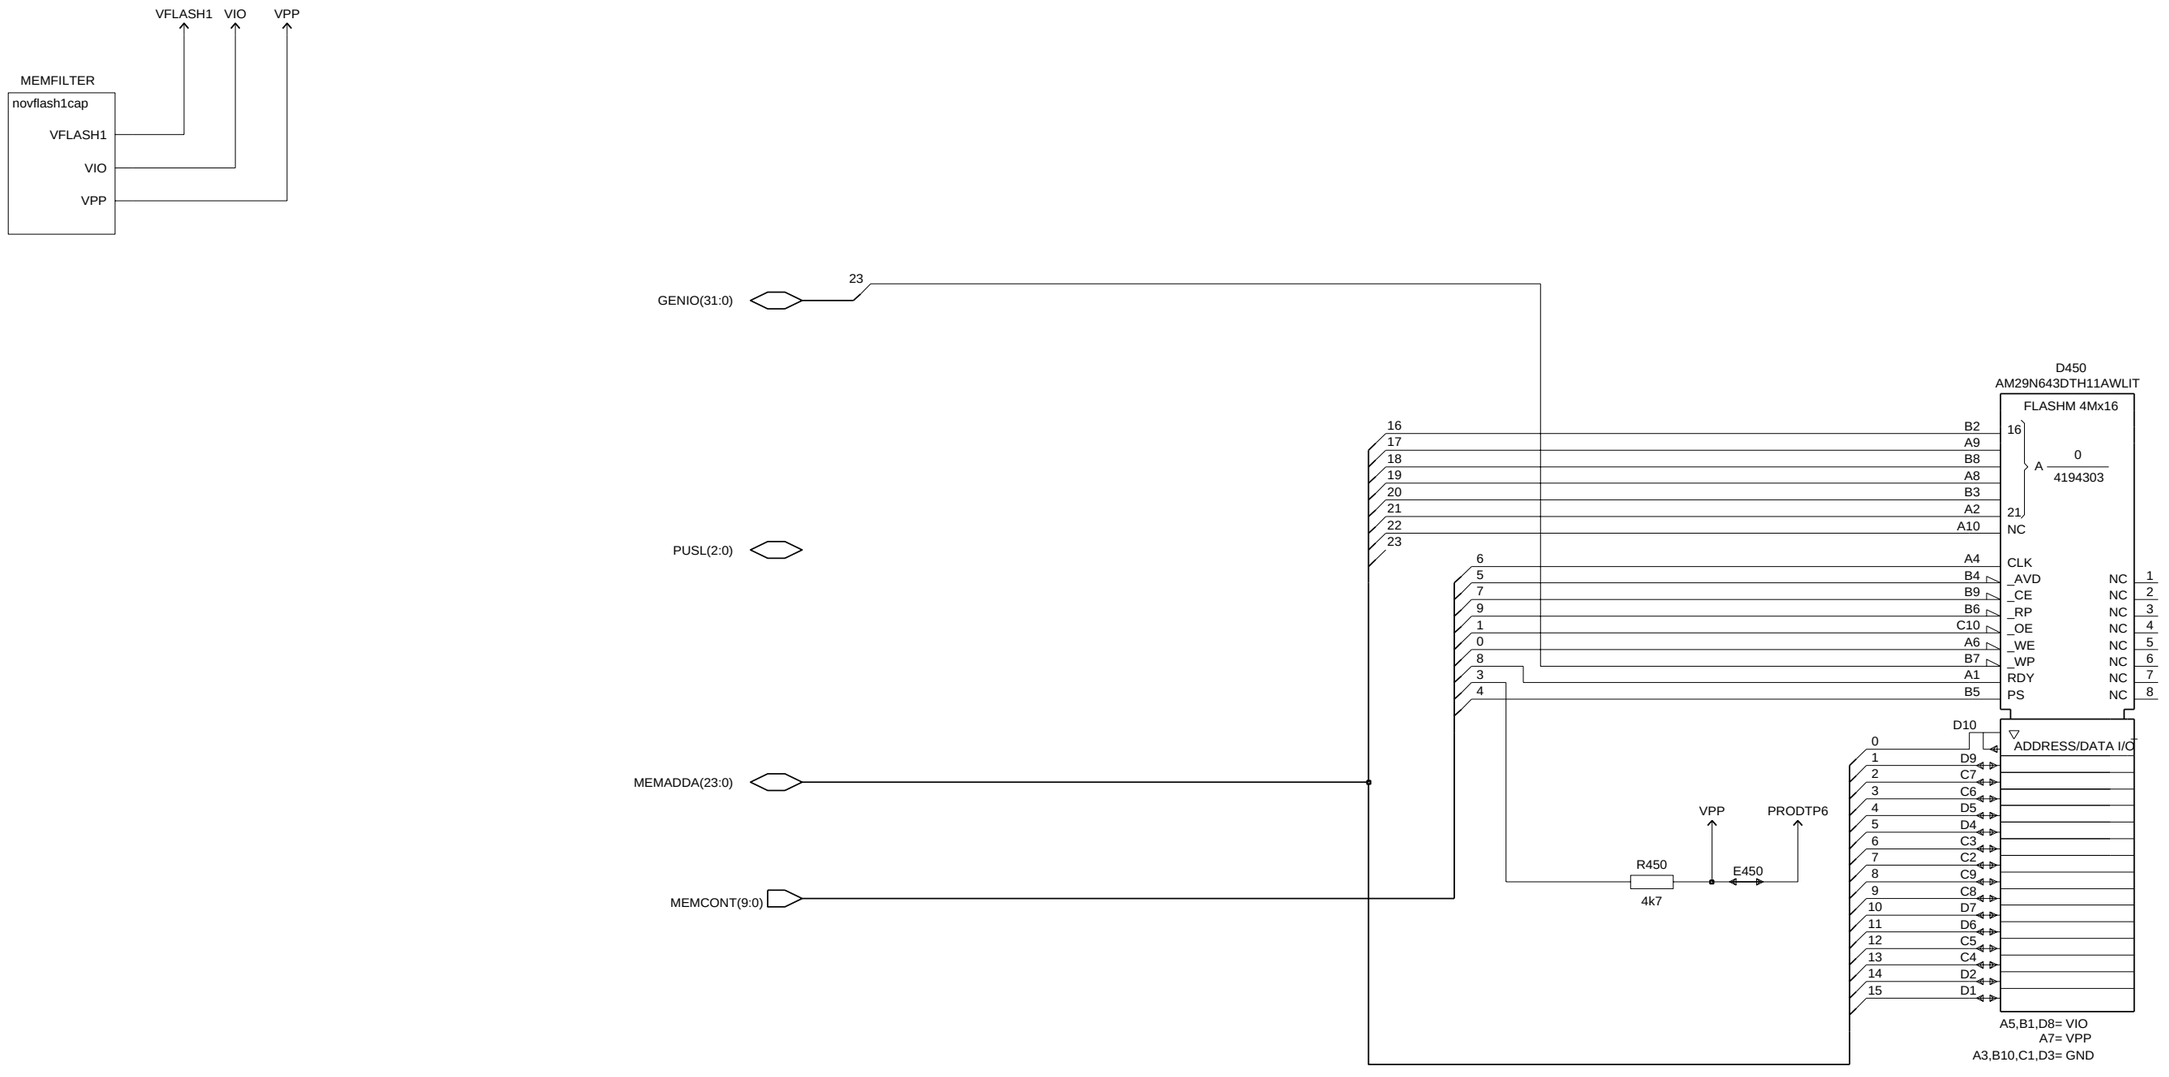

©Nokia Corporation

Decoupling Capacitors for Flash Memory (v.06.01 ed.14 for version 06)

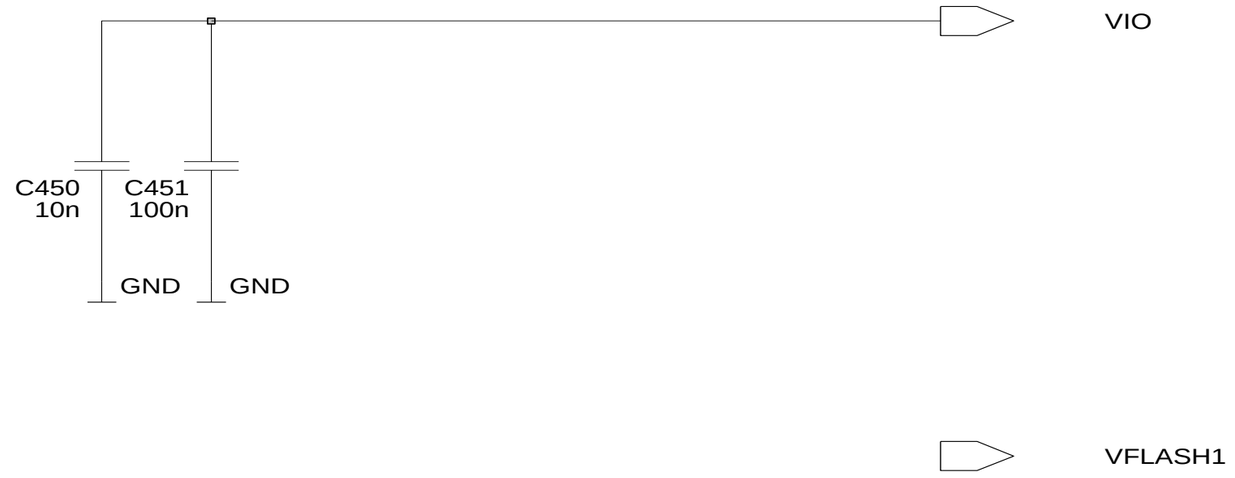

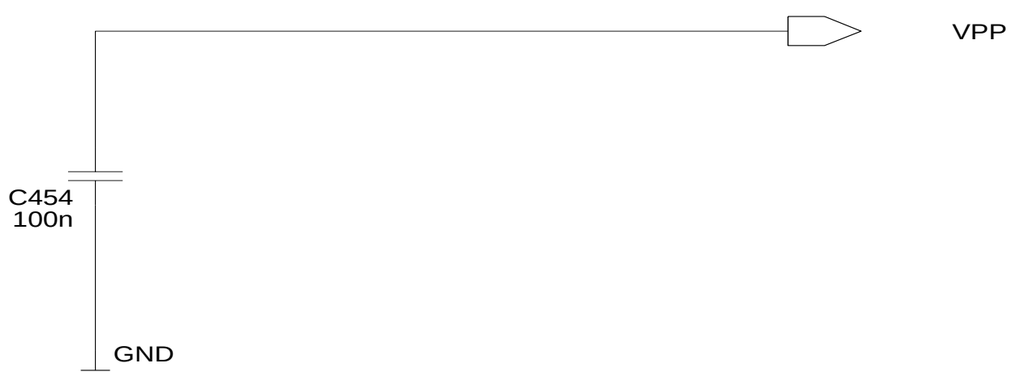

©Nokia Corporation

Production Test Pattern (v.06.01 ed.19 for version 06)

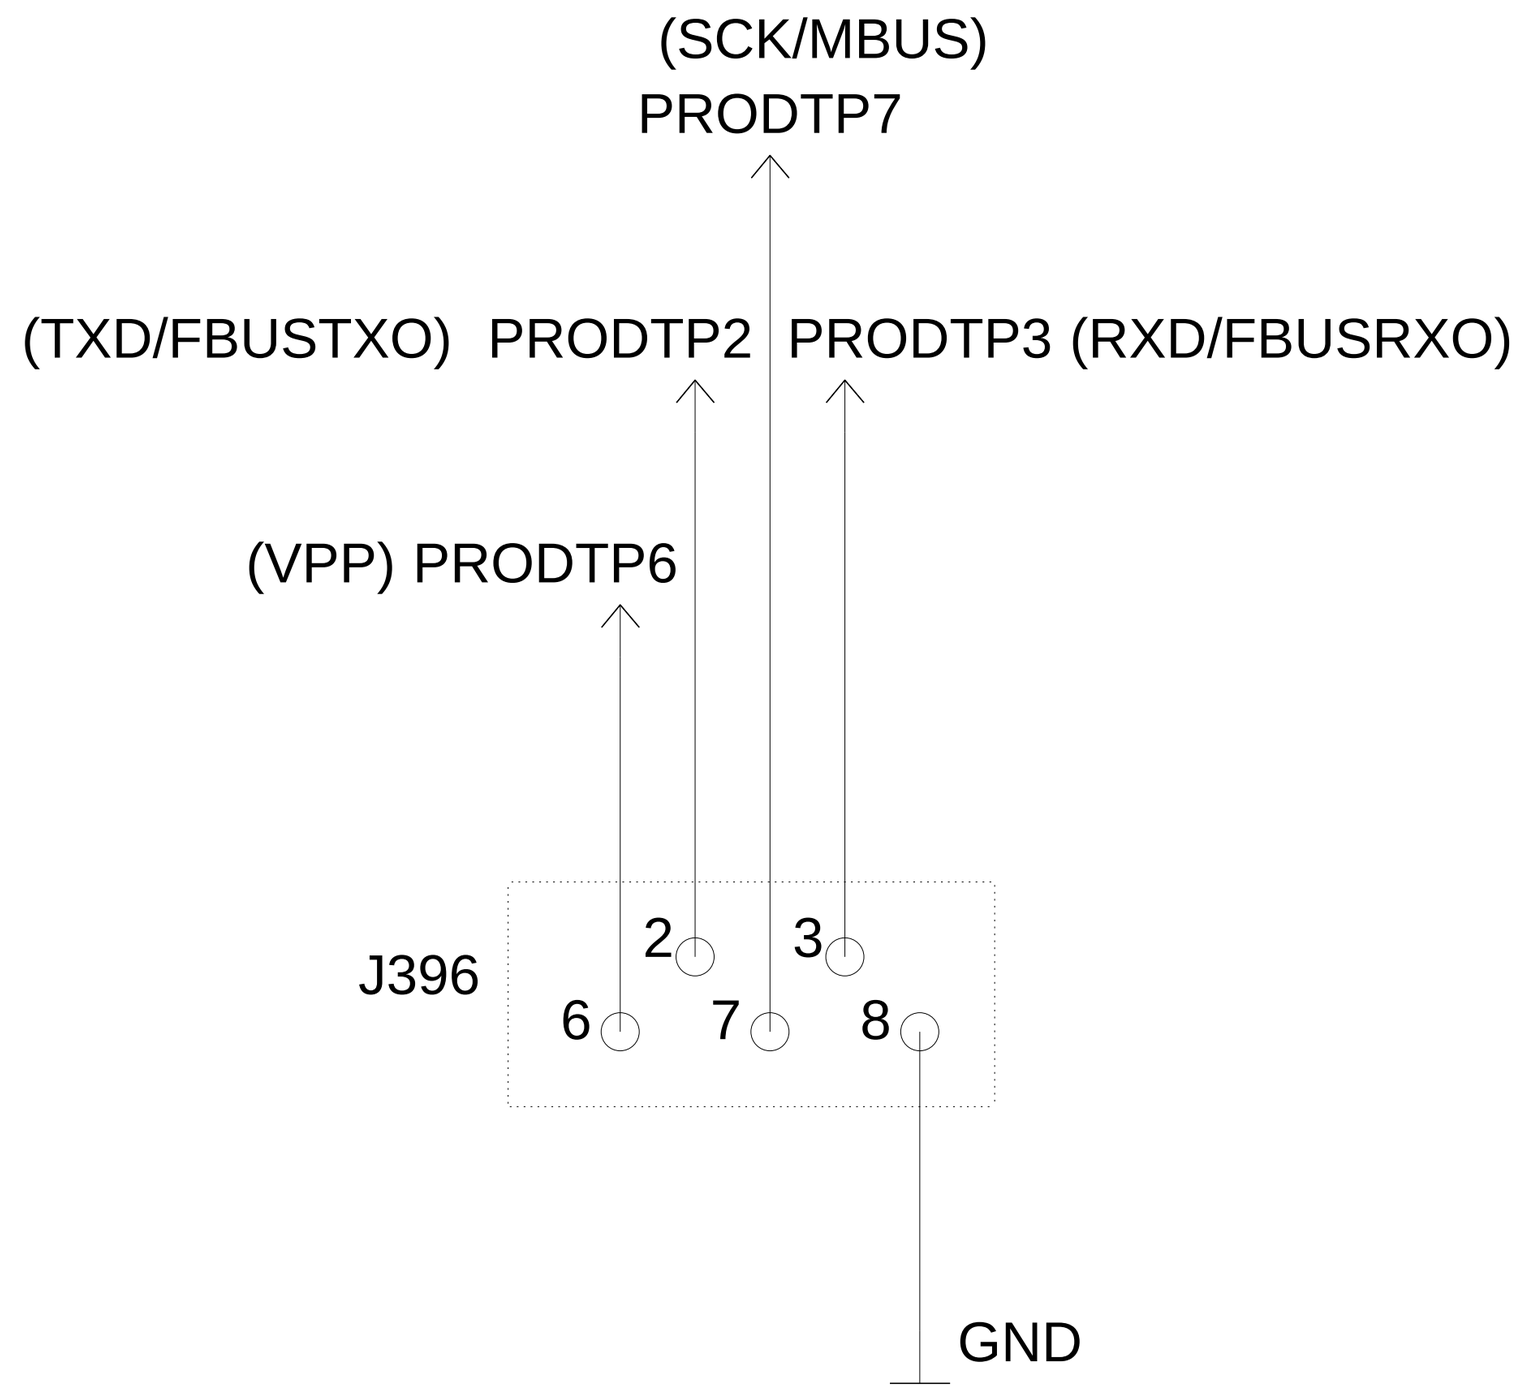

©Nokia Corporation

Layout Diagram of RM8 - Top

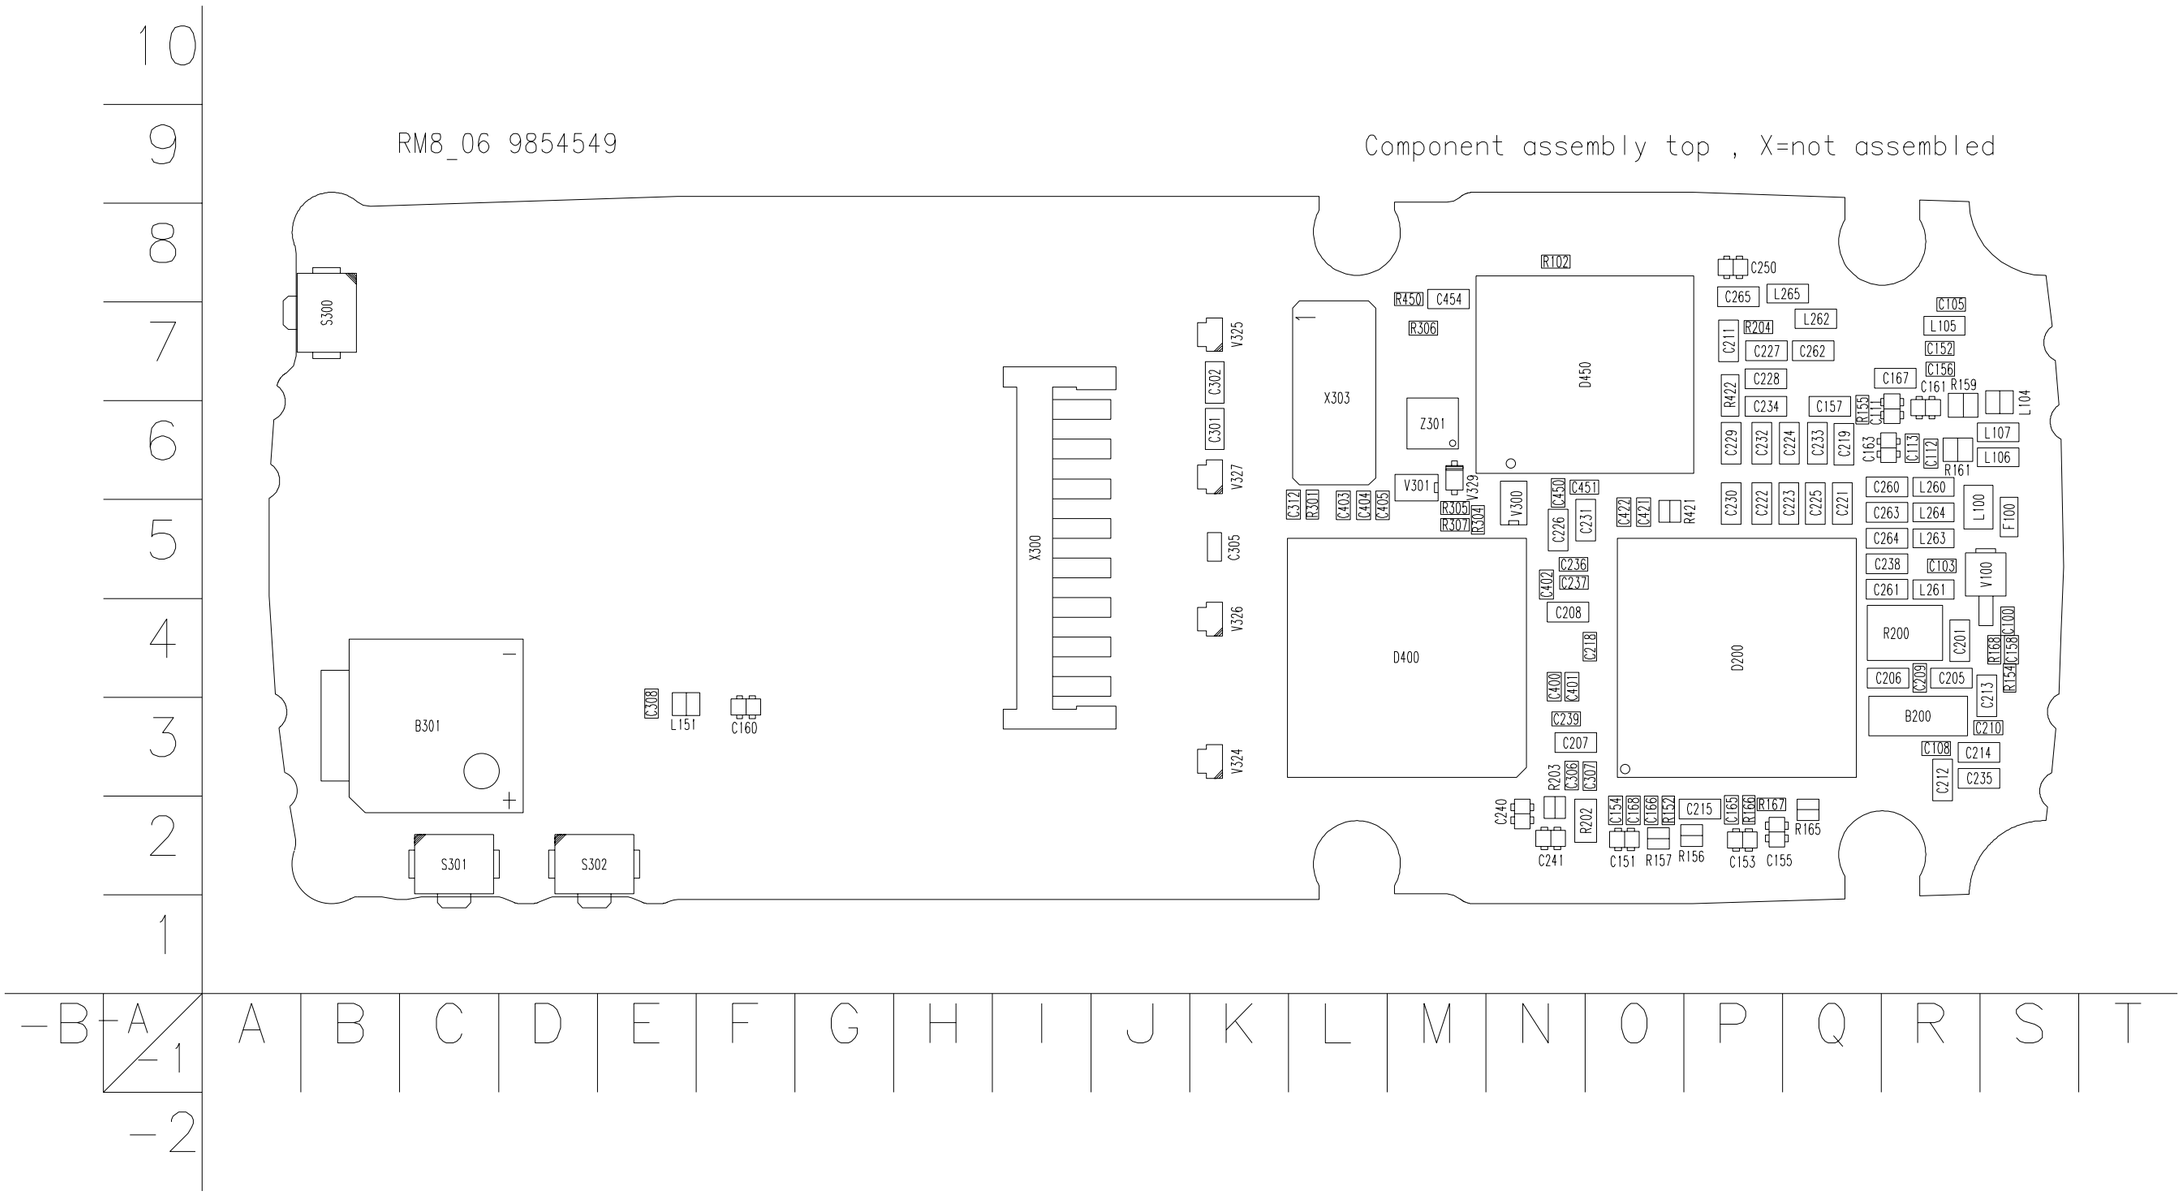

©Nokia Corporation

Layout Diagram of RM8 - Bottom

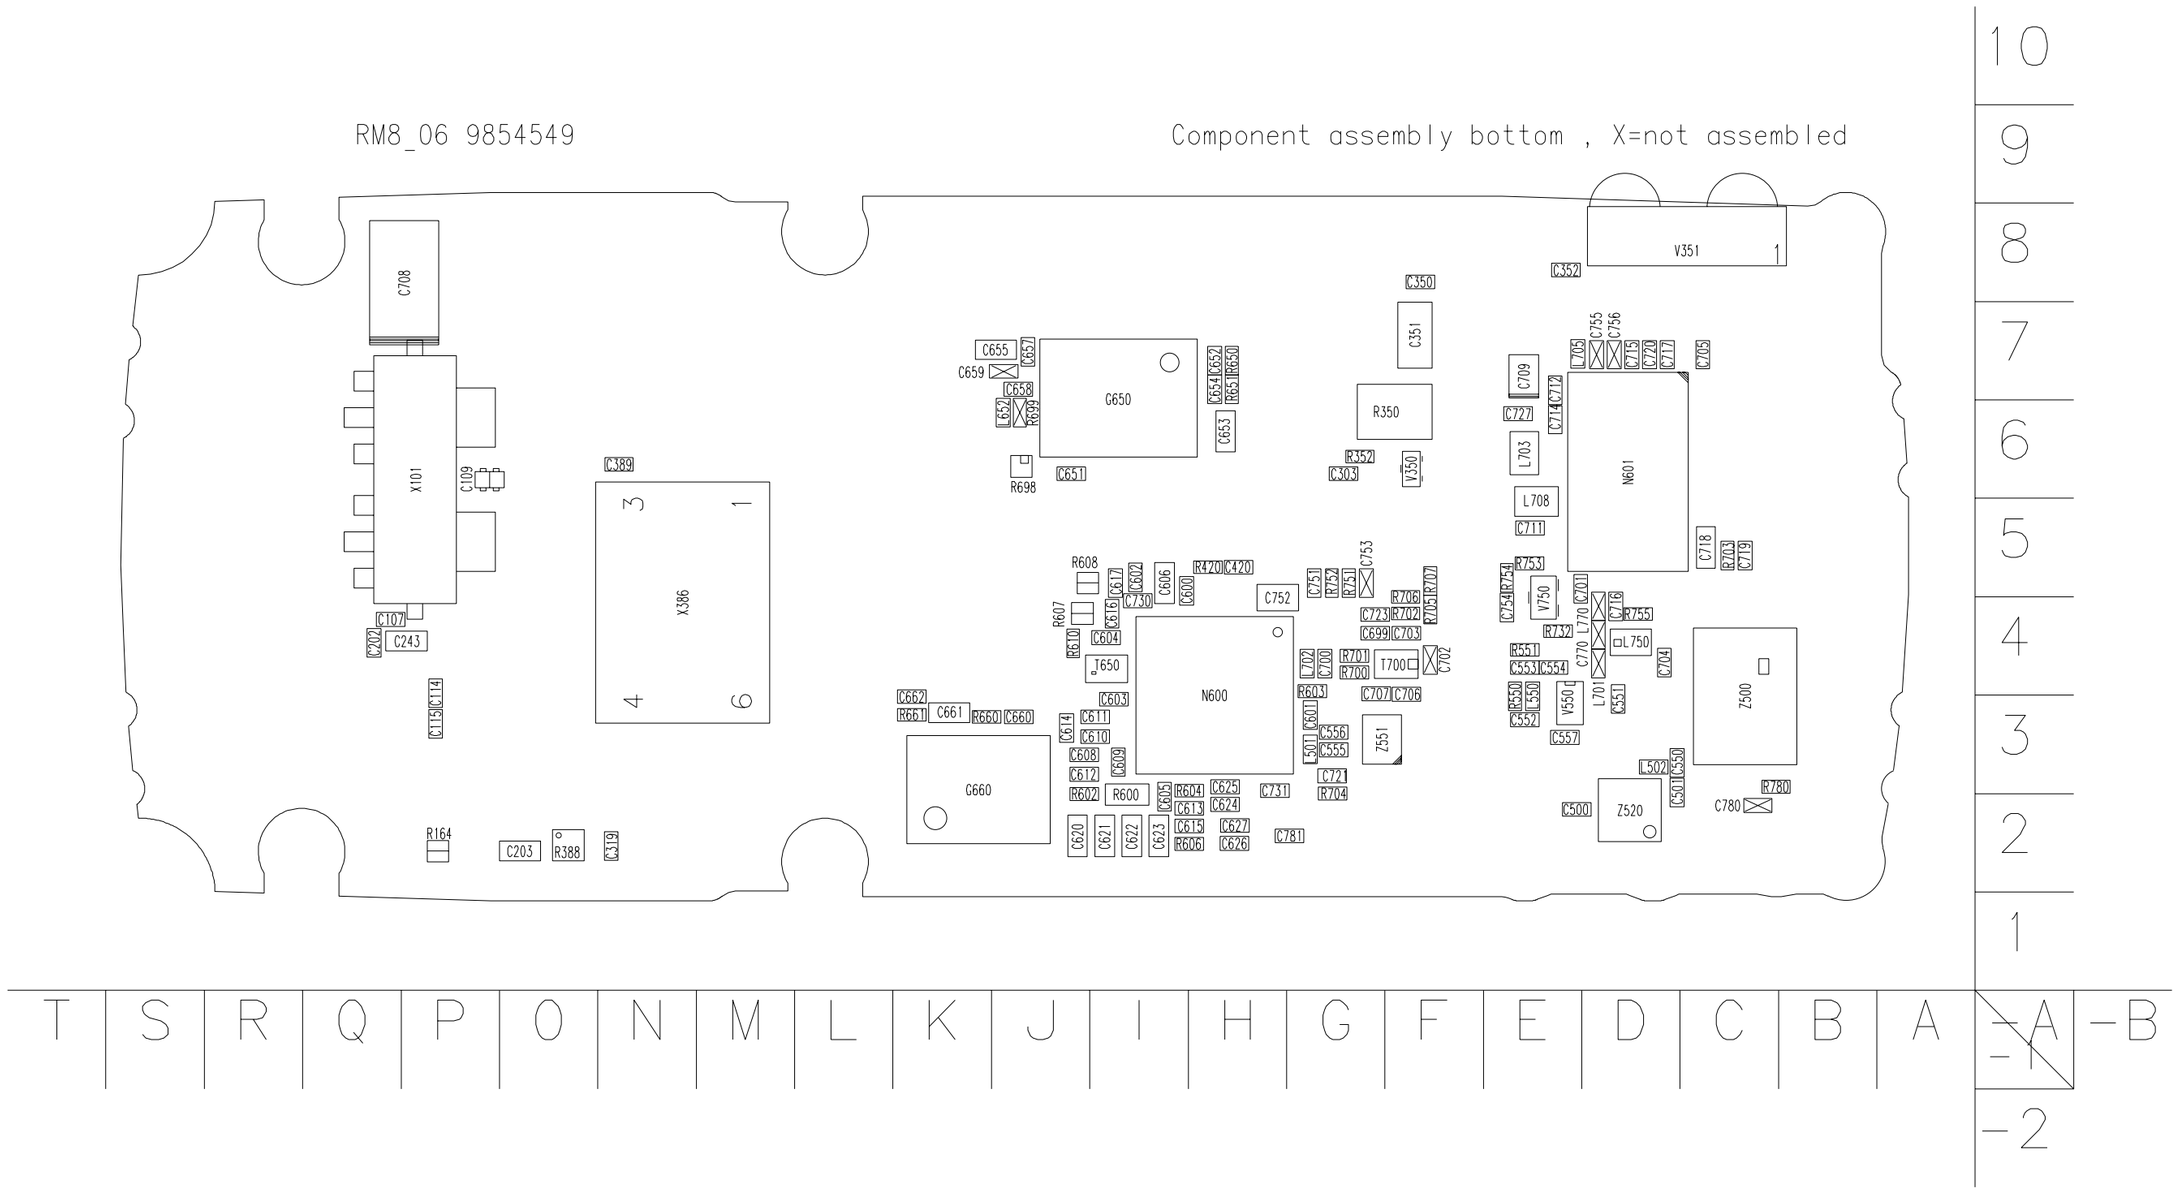

©Nokia Corporation

Testpoints of RM8 - Top

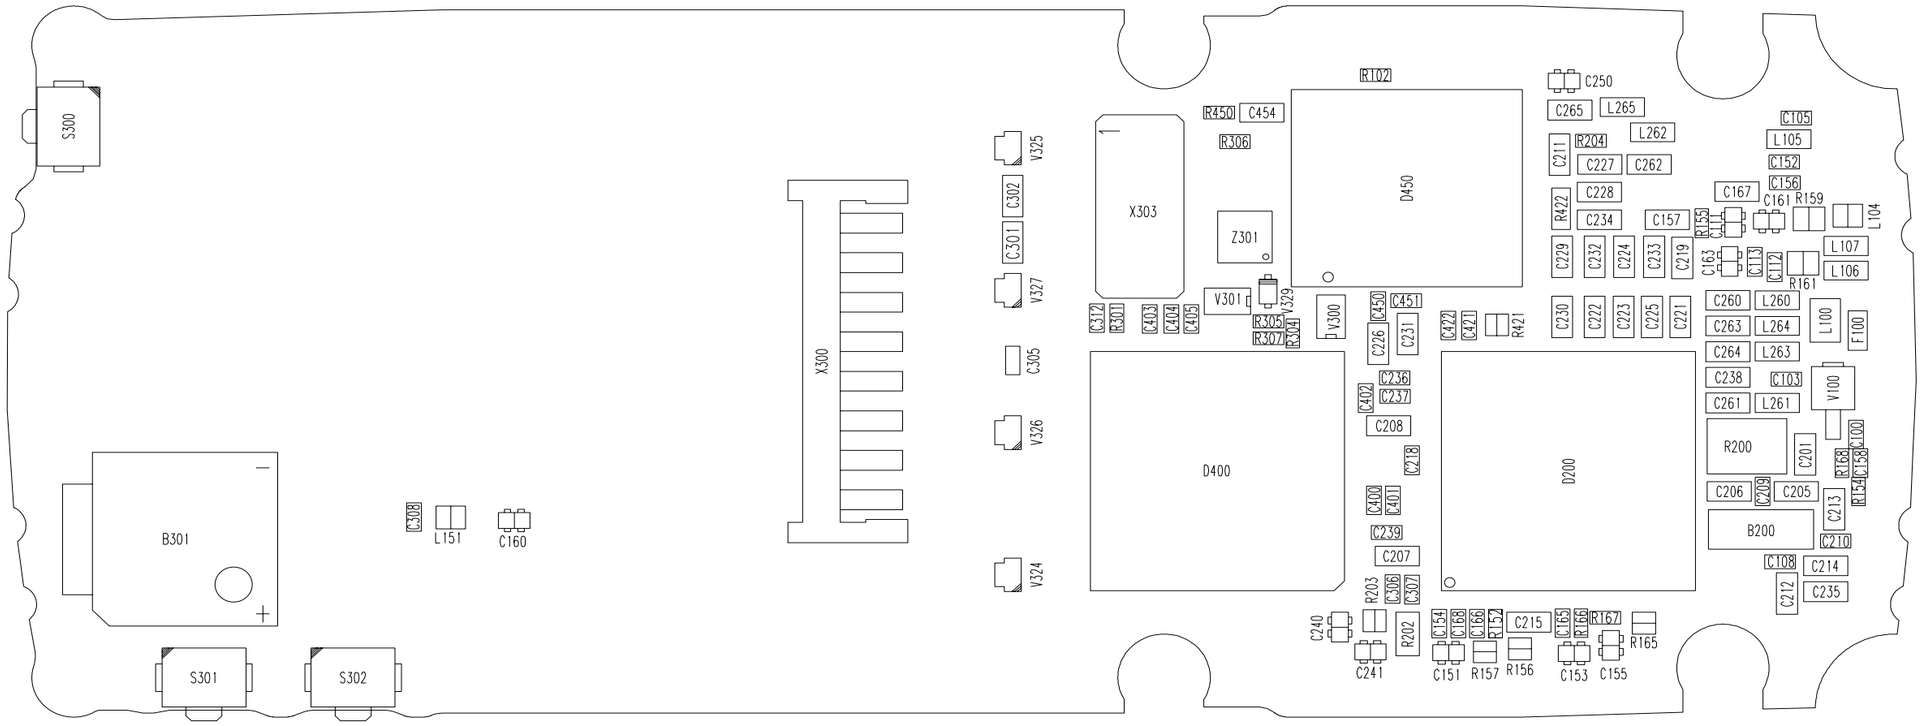

Testpoints of RM8 - Bottom

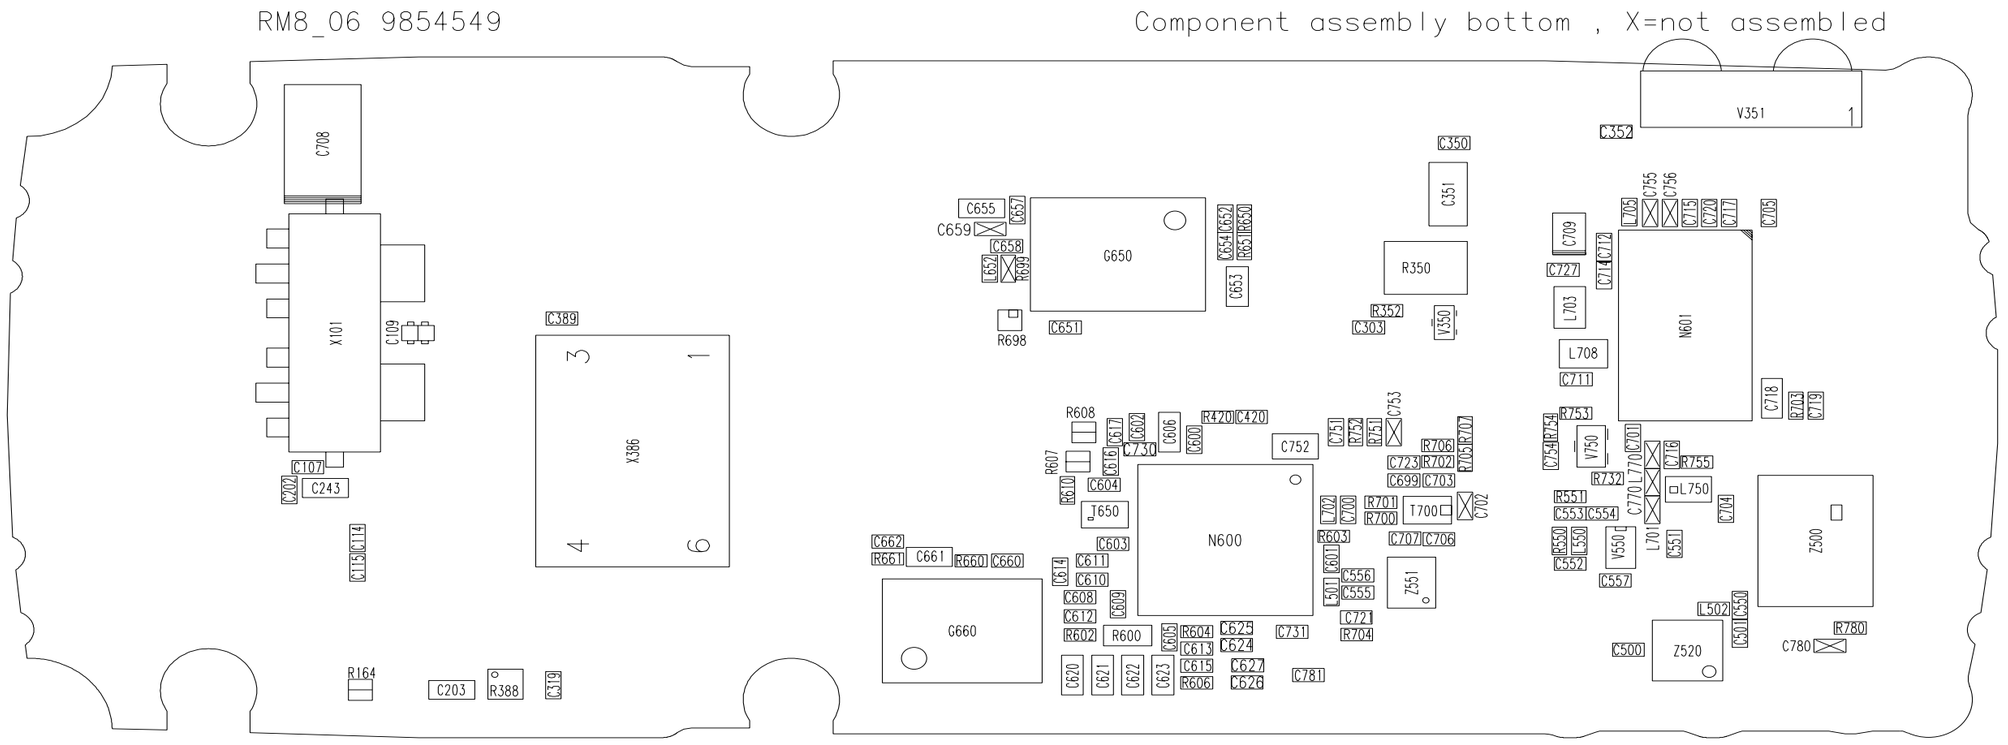

©Nokia Corporation

Testpoints of RM8 - Top

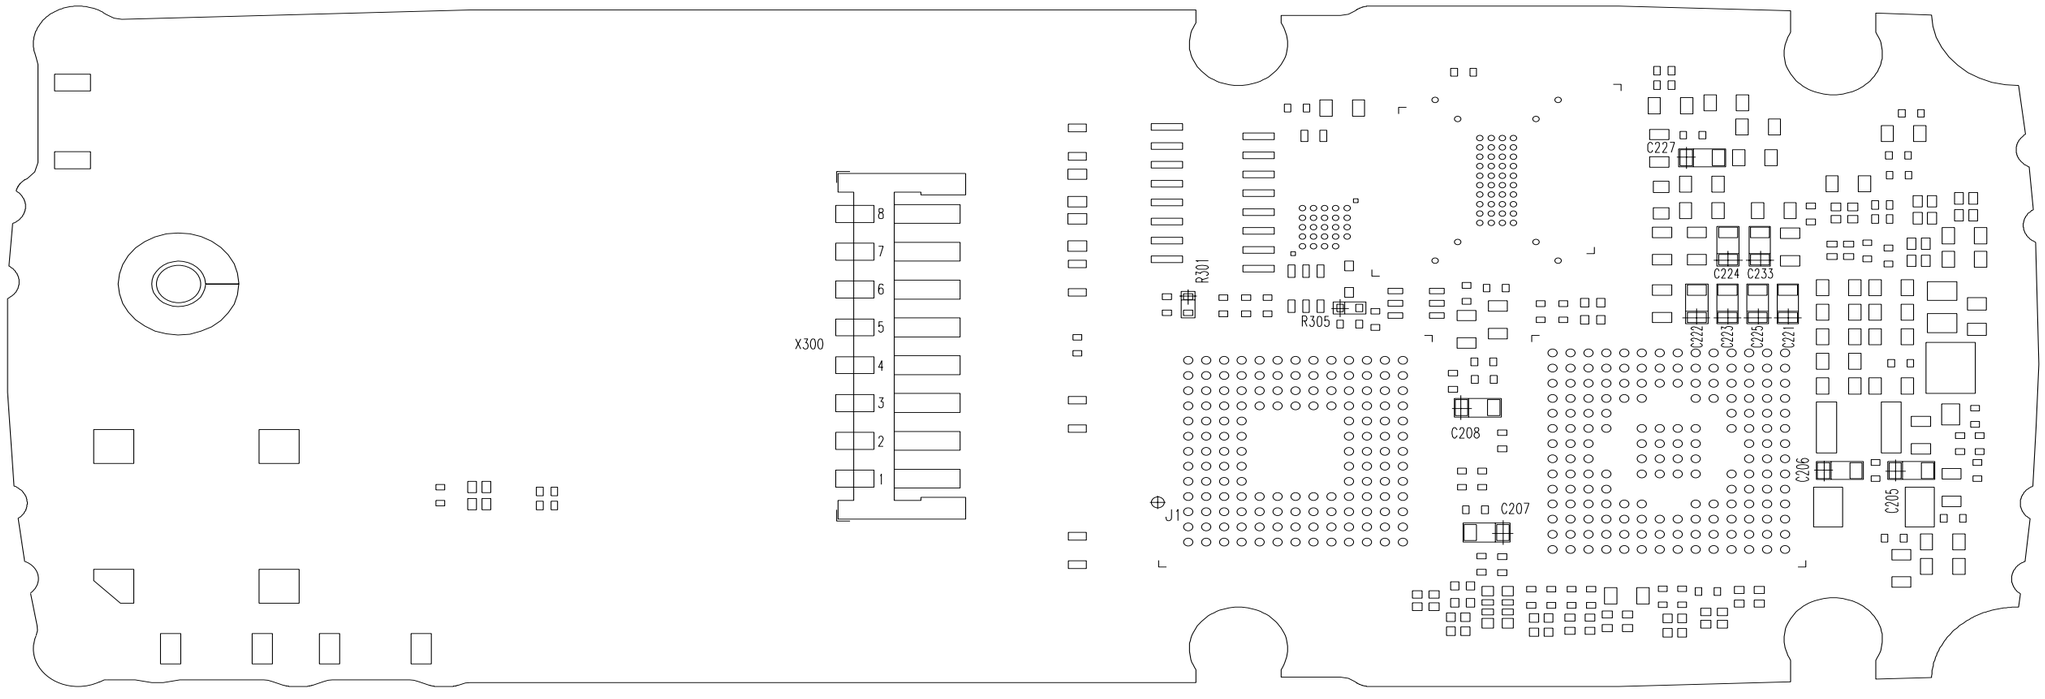

Testpoints of RM8 - Bottom

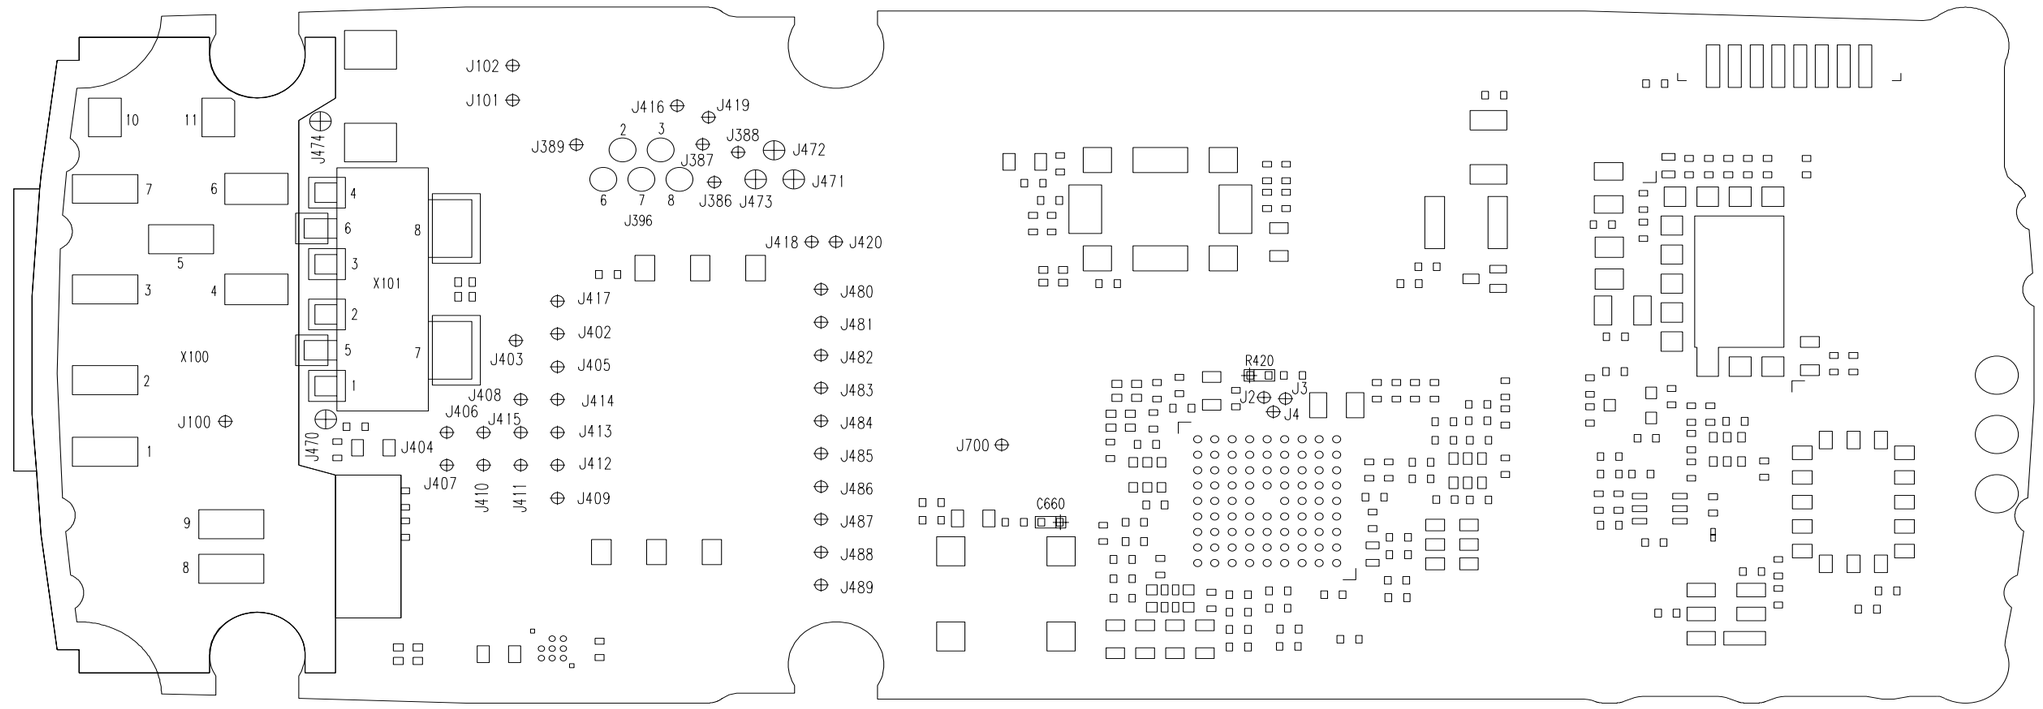

UI Board - LK5

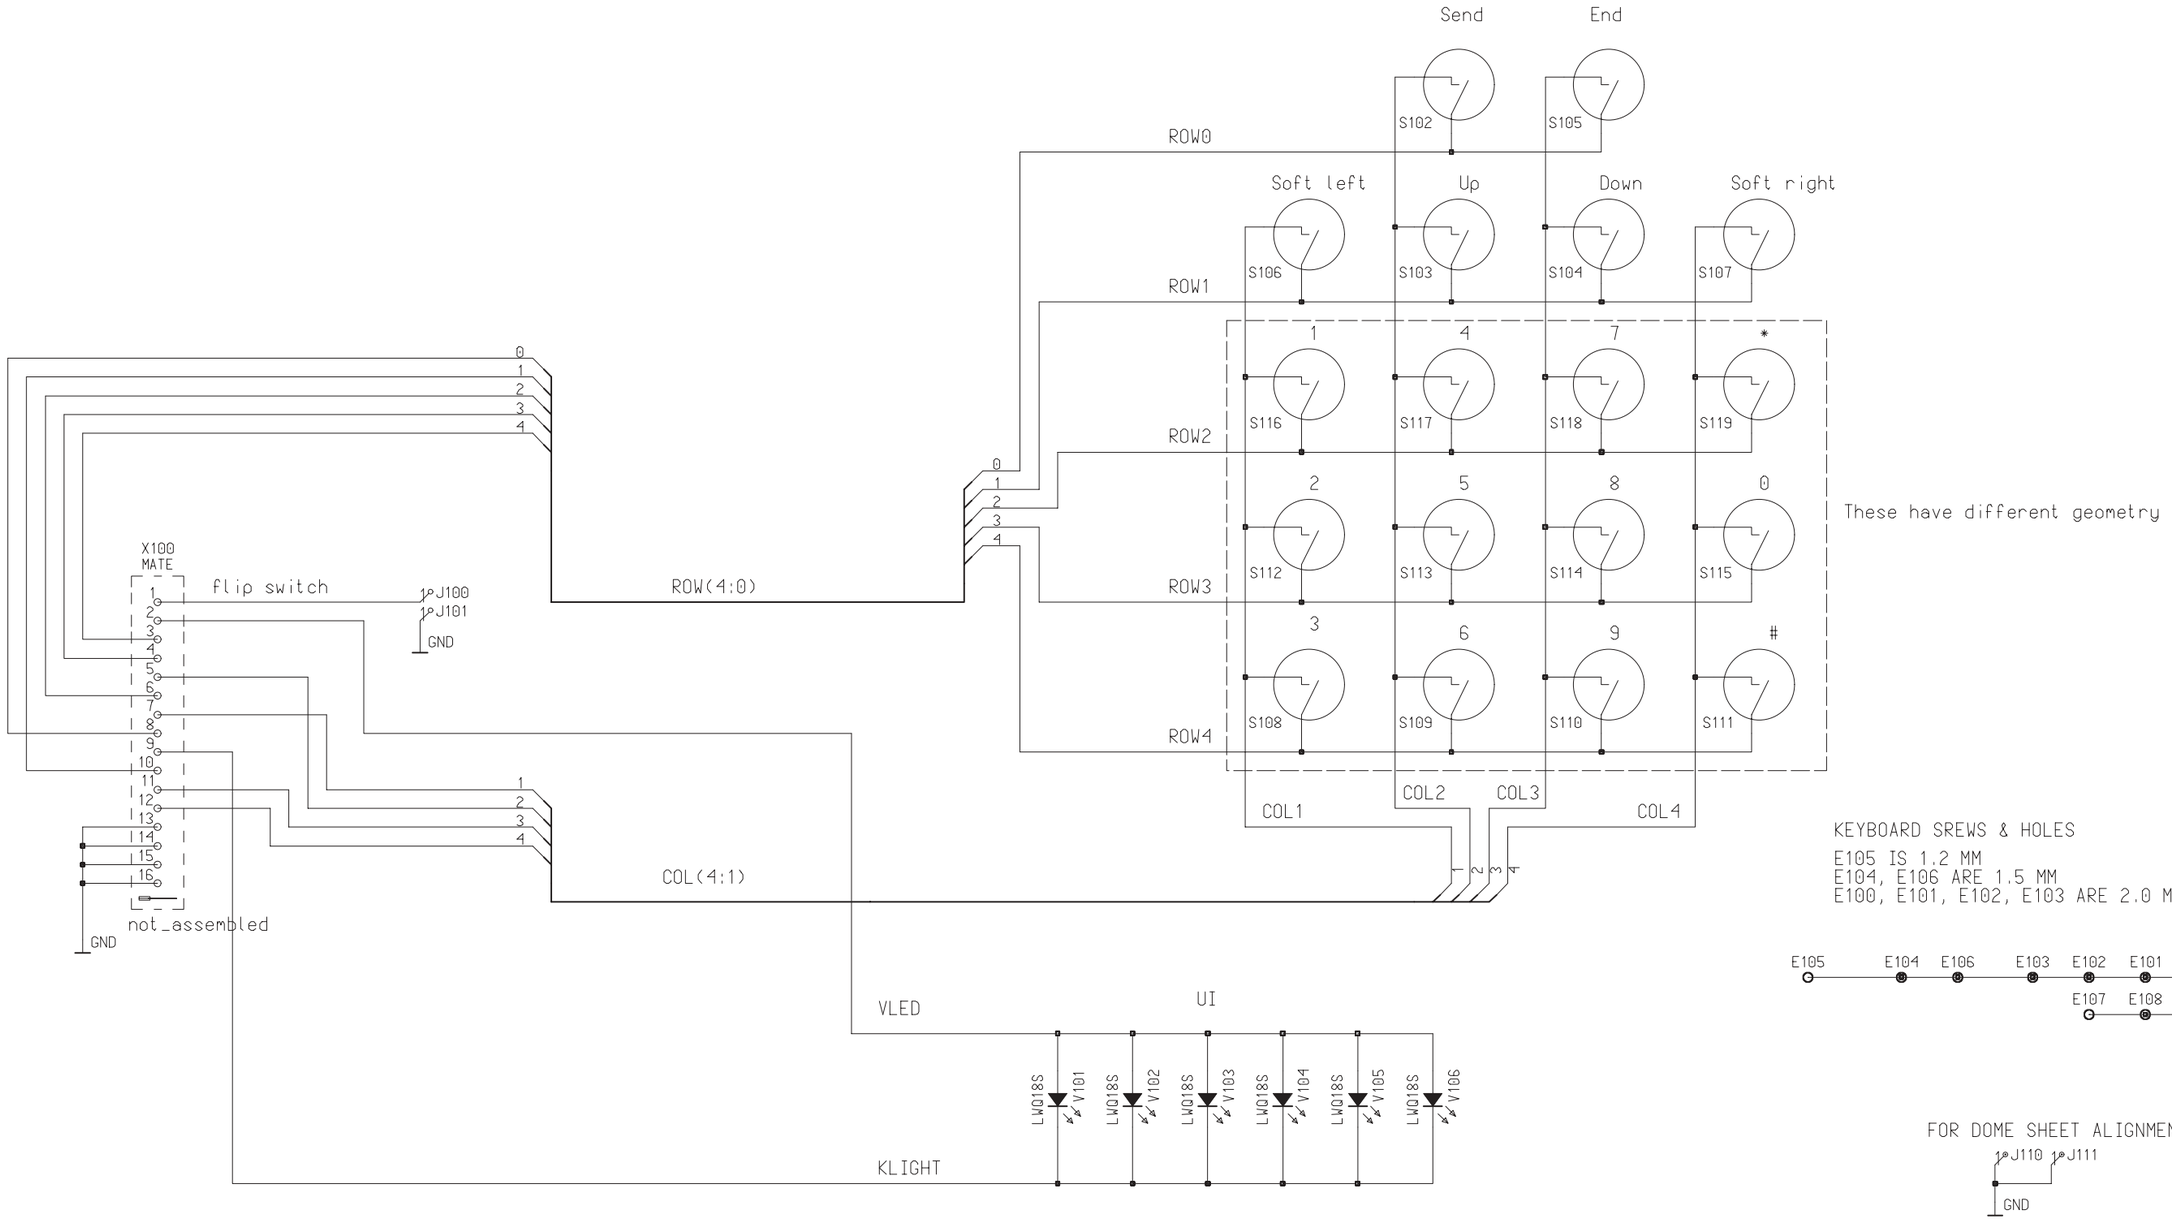

©Nokia Corporation

Layout Diagram - LK5

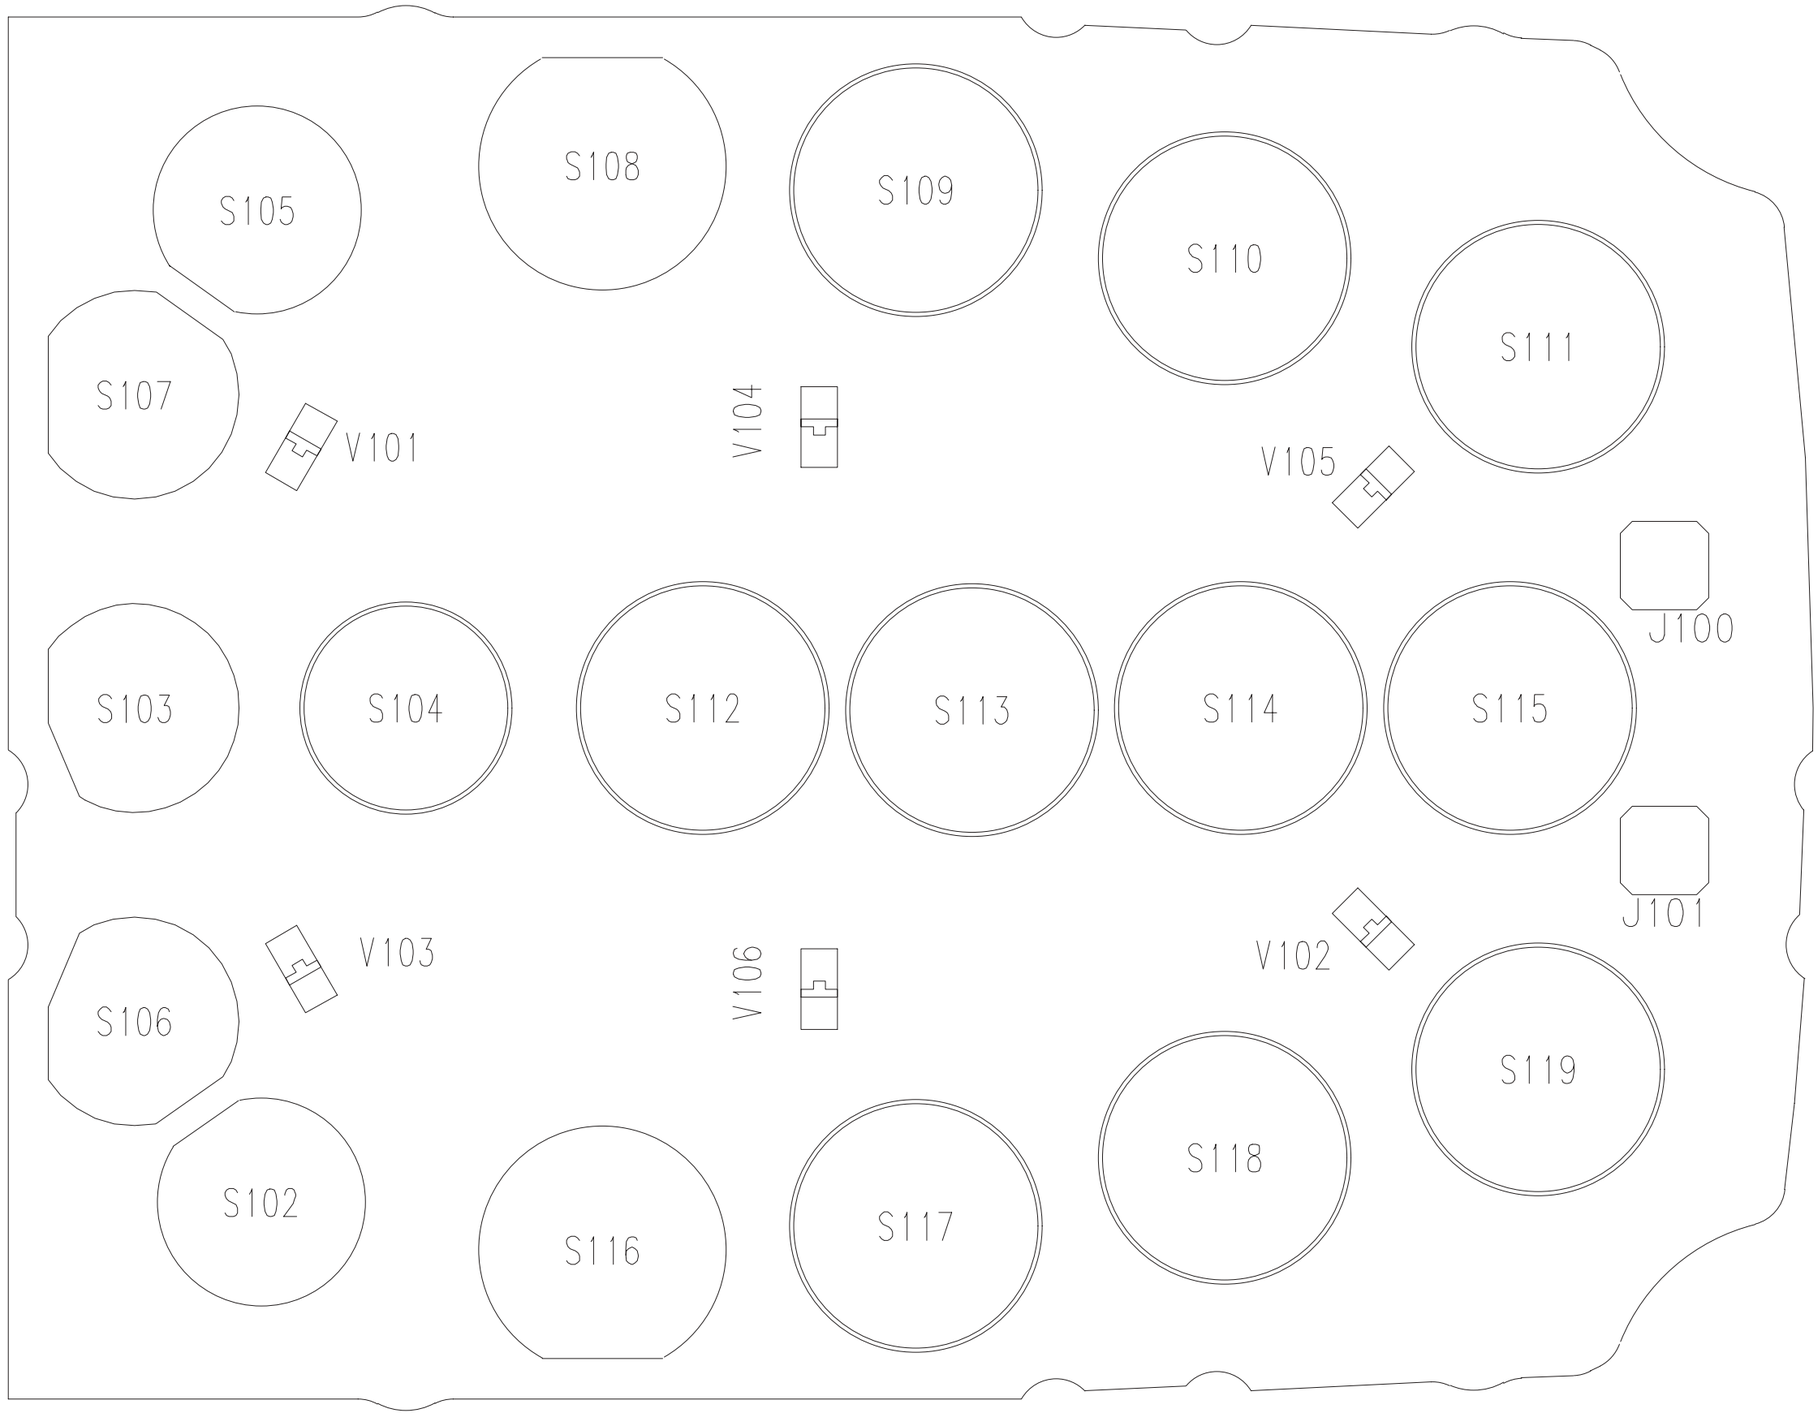

©Nokia Corporation

RF Testpoints diagram

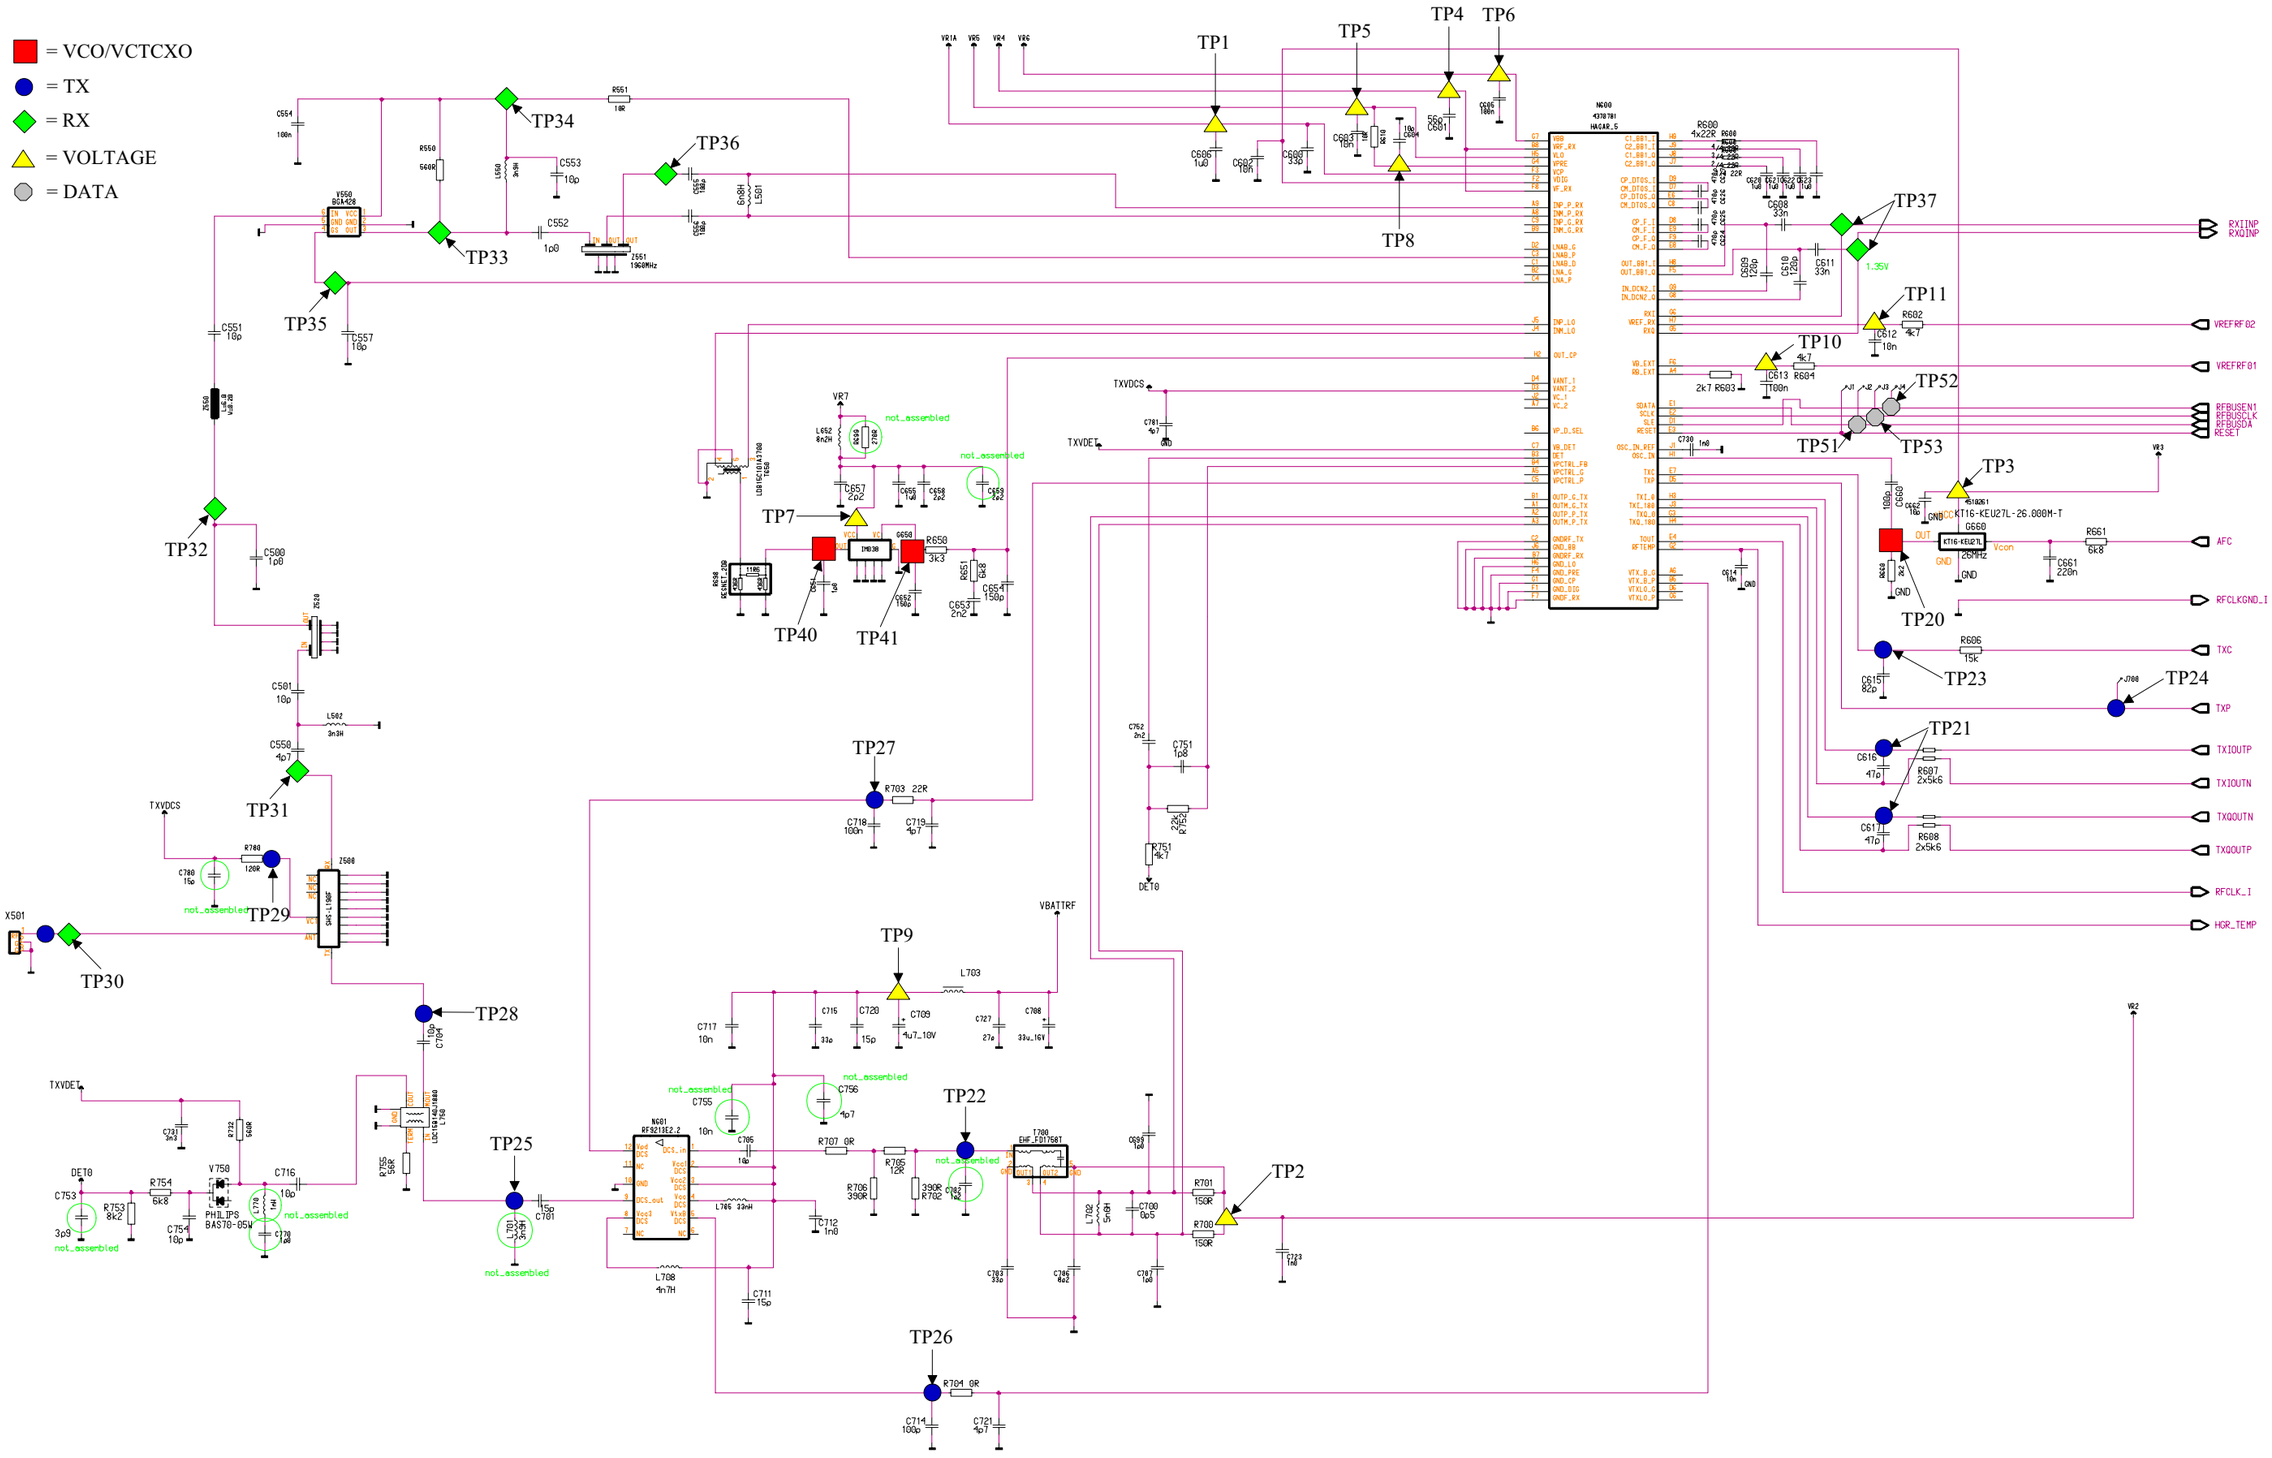

©Nokia Corporation

RF Testpoints - PWB layout

Measurements points for AMS and production repair

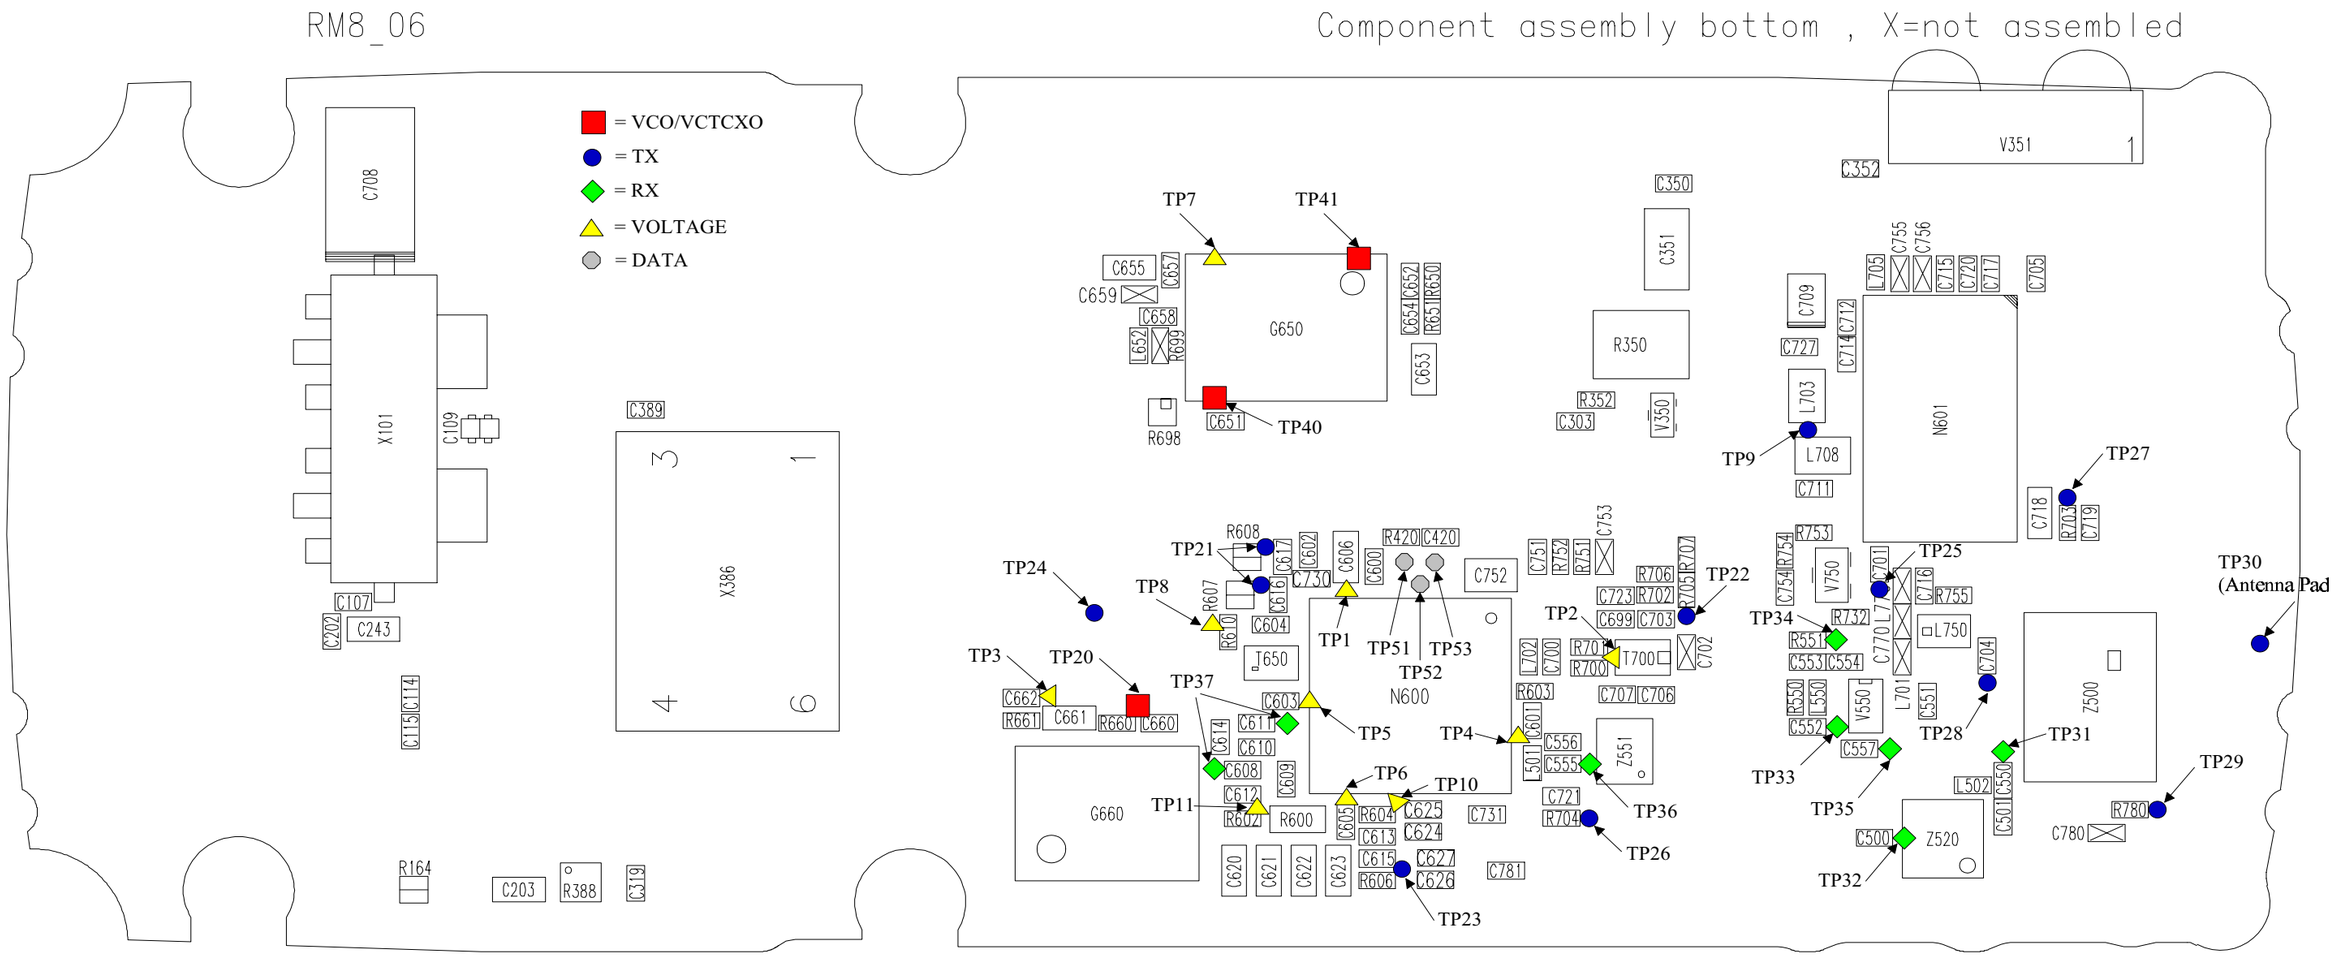

©Nokia Corporation